


Spooky2

Quick User's Guide

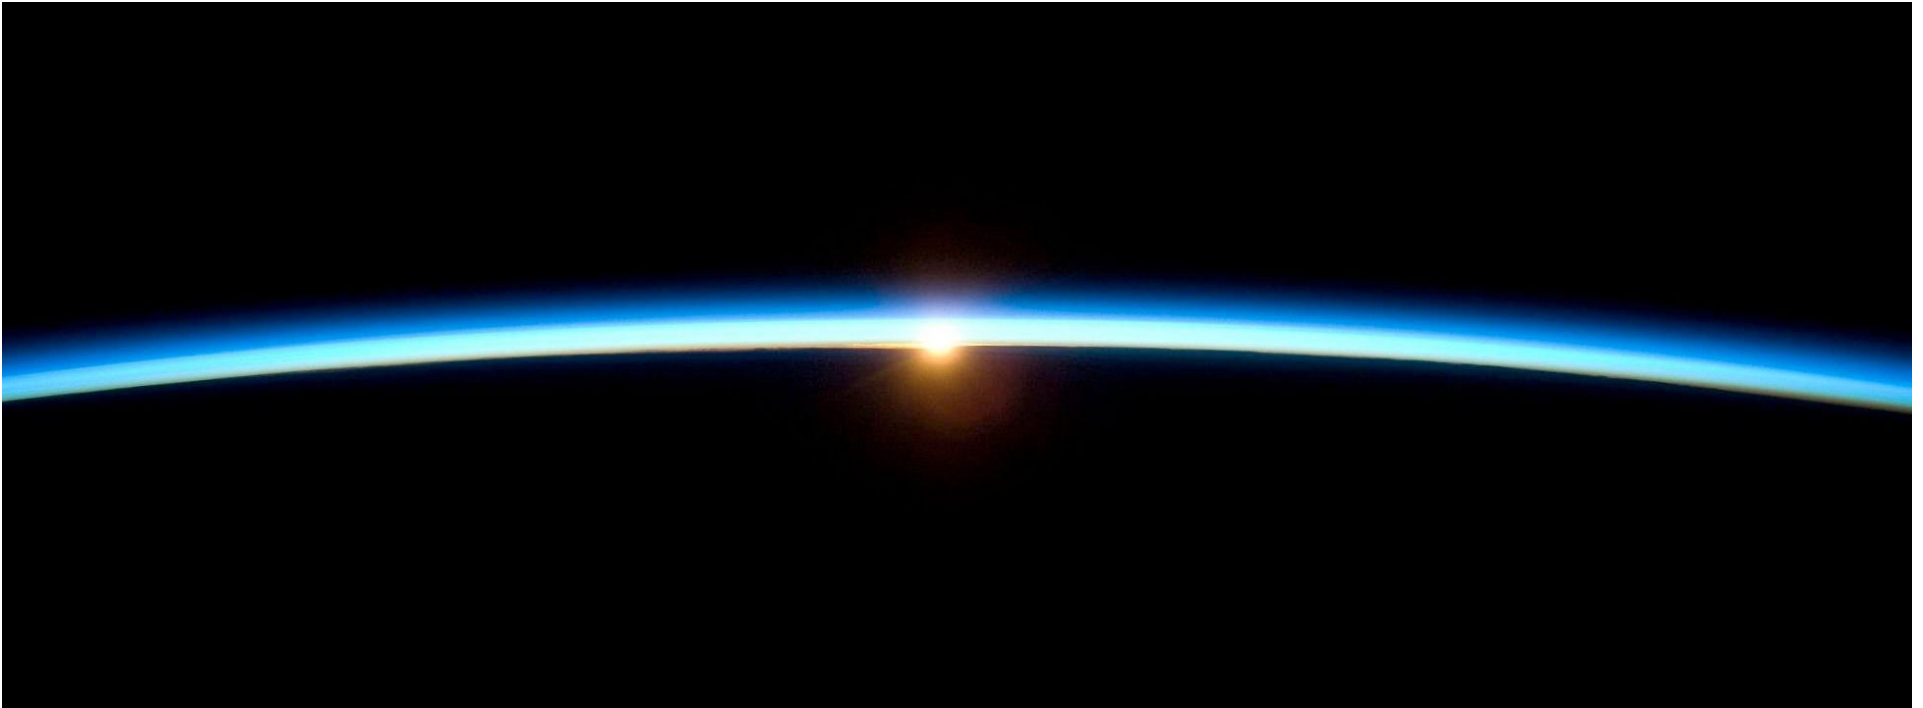

November 2017

Spooky Team

Table of contents

Welcome.....	
Precautions & Important advice.....	
Spooky2 Overview.....	
Hardware.....	
Spooky2 Discrete Accessories.....	5
Software.....	
Simple Installation Guide.....	31
Windows Warnings.....	38
Possible Windows Install Errors.....	39
Software Interface.....	39
Treatment.....	
Remote Mode.....	43
Contact Mode.....	49
Cold Laser.....	58
PEMF coil.....	64
TENS Internal Electrode.....	67
Spooky Central.....	71
Spooky Pulse.....	74
Colloidal Silver.....	80
Tips.....	
Treatment Choices.....	87
Essential First Step for Spooky2 Users - Terrain Protocol.....	Error! Bookmark not defined.
Legal Notice & Disclaimer.....	
Spooky2 Software License.....	

Welcome...

Welcome to the Spooky2 Quick User's Guide. This Guide allows you to quickly and easily start using Spooky2 to kill pathogens and heal organs and systems. Now take control.


Precautions & Important Advice

To use the Spooky2 Rife System safely you must:

1. Never unplug it while in use. Always stop it and switch it off first.
 - 2. Don't adjust the generator front panel controls.** The Spooky2 Rife System is designed to be totally controlled by the software.
 3. If you do suffer with heart problems, or wear a pacemaker or other electrical implant, you should **NEVER** attach electrodes to the Spooky2 system. Please use Spooky2's Remote Mode **ONLY**.
 4. If you suffer from impaired liver or kidney functions, please exercise caution when using Spooky2. Frequency generation systems should **NEVER** be used while pregnant.
 5. Run Terrain Protocol once before anything else – particularly important for Spooky Central users. This protocol is also built in Cancer Protocol or Morgellons & Lyme protocol
- ◆ Drink plenty of pure water to help conductivity and toxin elimination.
 - ◆ Note that the Morgellons & Lyme Protocol is a very efficient wide spectrum antibiotic/parasiticide.

◆ When you kill organisms, make sure you detox. Otherwise, a Herxheimer reaction – nausea, joint/lower back pain, etc - may ensue. If so, run Herxheimer - DB in the Morgellons & Lyme Protocol.

Spooky2 Overview

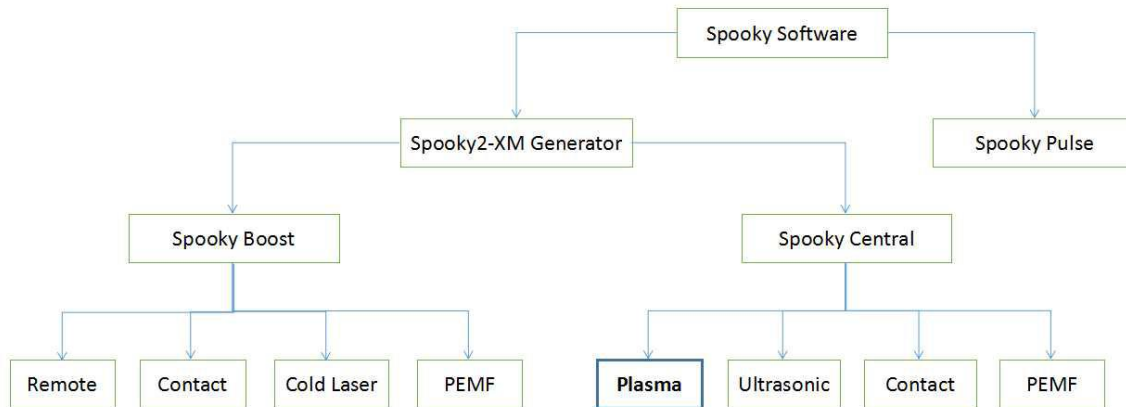

Spooky2 is the most highly advanced and versatile Rife machine in the world. The brain of this system is Spooky2 software, freely downloadable from www.spooky2.com. We recommend downloading the Spooky2 Starter Pack. This contains the latest software and User's Guide. And it runs on a Windows PC - even a cheap netbook. Windows 7, Windows 8, Windows 8.1, and Windows 10 are required.

Full Package:

Spooky2 Starter Pack

♥ Contains the latest Spooky2 software installer, the Spooky2 User's Guide, the Spooky2 Quick Guide, ChainEditor 2.1, and the Spooky2 Resources Directory (all separately linked below).

The heart of this system is Spooky2 XM generator. It is a frequency generator. This little generator unlocks the incredible power of Spooky2.

There are five main transmission methods in Spooky2: Remote, Contact, PEMF, Cold Laser, and the powerful Plasma. You can connect the first four directly to Spooky2-XM generator or through Spooky Boost, but Plasma can only be driven by Spooky Central.

Spooky Pulse is an infrared biofeedback system. It helps find frequencies in the body that correspond to viruses, bacteria, and parasites.

Hardware

Please check your products according to the packing list first. And the followed pictures will help you recognize products.

Spooky2 Discrete Accessories

1. Spooky2–XM generator



2. Spooky Boost v3.1



3. Spooky Remote v2.0



4. Spooky Conductive Carbonized Rubber Hand Cylinders



5. Spooky Tens Pad



6. Spooky Tens Contact Kit



7. Spooky Tens Internal Electrode



8. Spooky Cold Laser Twin



9. Spooky Cold Laser Wrist



10. Spooky PEMF Coil



11. Spooky Phanotron Plasma Tube



12. Spooky Straight Plasma Tube



13. Spooky Ultrasonic



14. Spooky Pulse Earclip Option



15. Spooky Pulse Fingerclip Option



16. Spooky Pulse Finger Clip



17. Spooky Pulse Ear Clip



18. Spooky2-XM generator Spare Communication Board



19. Spooky 10 Port USB 3.0 Hub



20. Spooky Quad 5V Power Supply



21. Spooky2 Silver Rods



22. Magnetic Stirrer



23. TENS Cable



24. Spooky USB Filter Cable



25. Spooky BNC Filter Cable



26. BNC Cable



27. BNC Female Connector



28. Spooky2 USB Memory Stick



Software

Simple Installation Guide

Let's get Spooky2 installed first.

1. Download the software:

Go to www.spooky2.com/downloadspage/ and click on the Spooky2 Starter Pack to download it.


2. Install the software:

A. Go to your download folder and extract all files from the downloaded Spooky2 Starter Pack zip file.

B. In the new window that opened up go into the Spooky2_Starter_Pack folder.

C. Go into the spooky setup folder. Then double click on the spooky setup application and follow the screen prompts.


Here, the installer is unpacking its files.

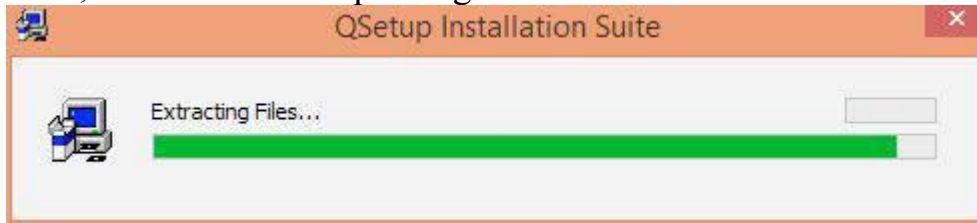


Language Selection: next, you'll see this language selection dialog. Choose your installer language from the list, then click OK.




Then you'll see the Welcome screen on the next page.

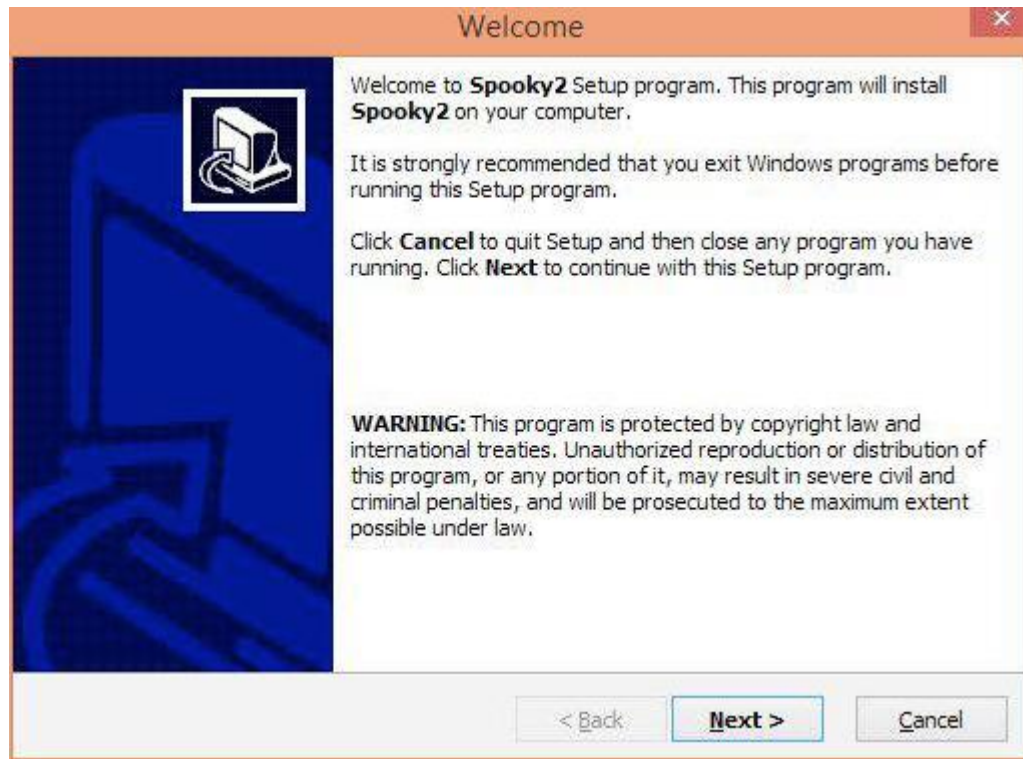


Welcome: the installer program starts. Click Next >

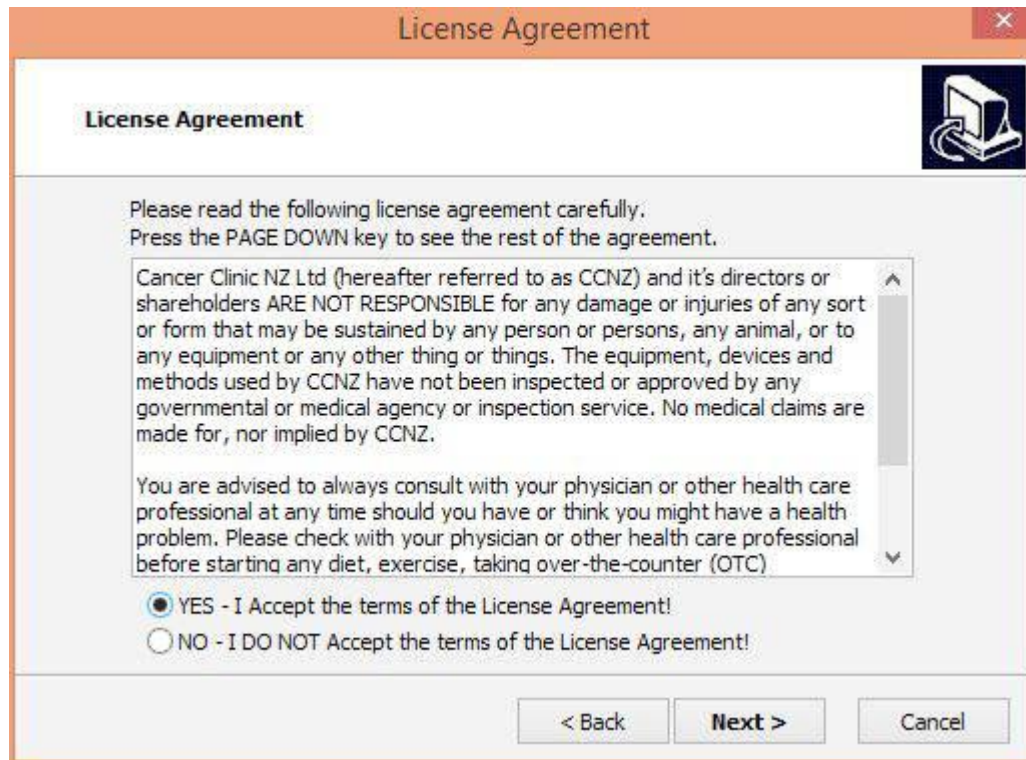


The License Agreement screen appears. Choose "YES – I Accept the terms of the License Agreement," then click Next >

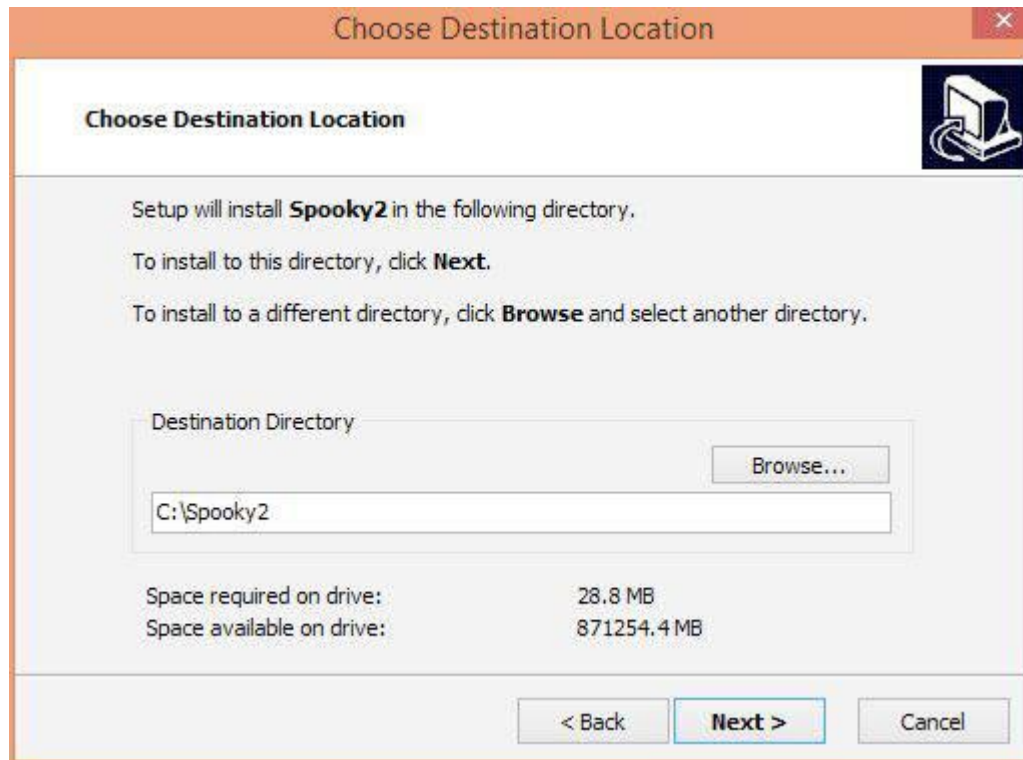

Choose Destination Location: the installer will create a new folder named Spooky2. Click Next >
The following screen appears:

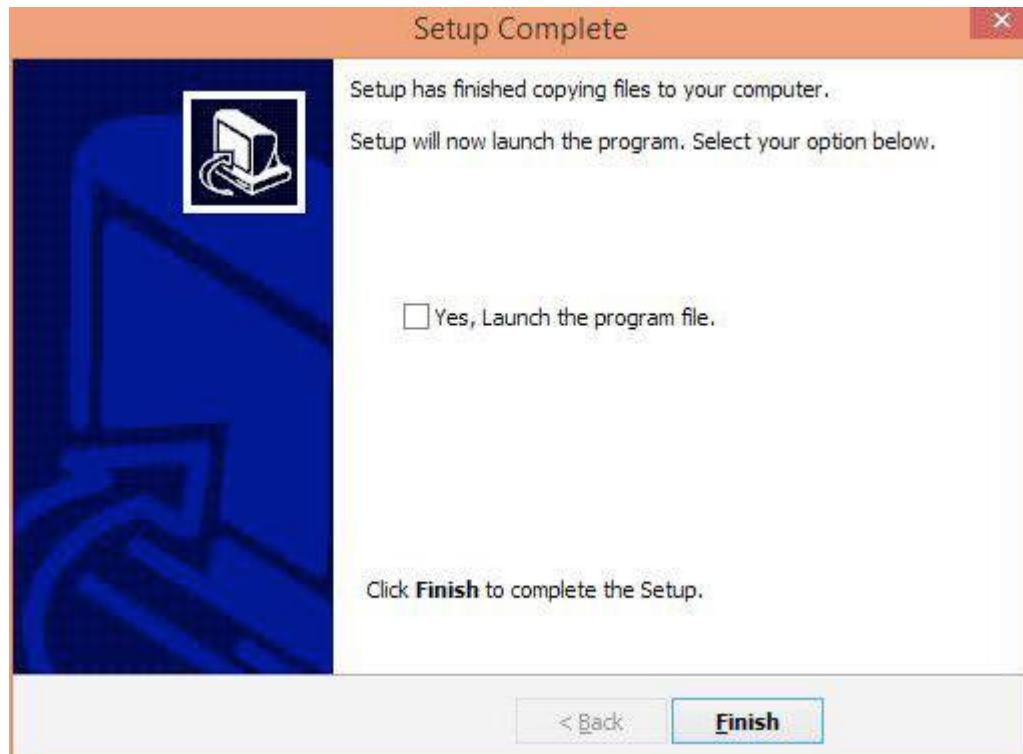


- D. When the installation is done, tick “Yes, launch the program file,” then click the “Finish” button.
E. Spooky² will launch. You’ll see a “No generators detected” alert.

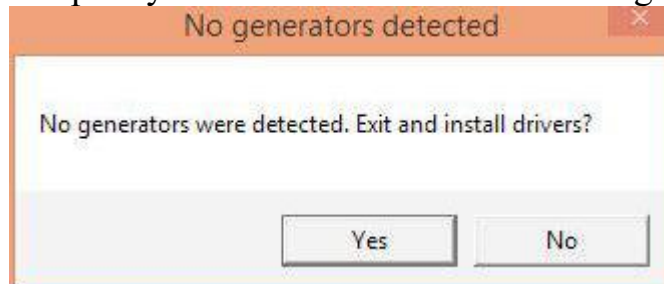

Click “Yes” to install drivers, and the driver installer will launch.



Click Next >

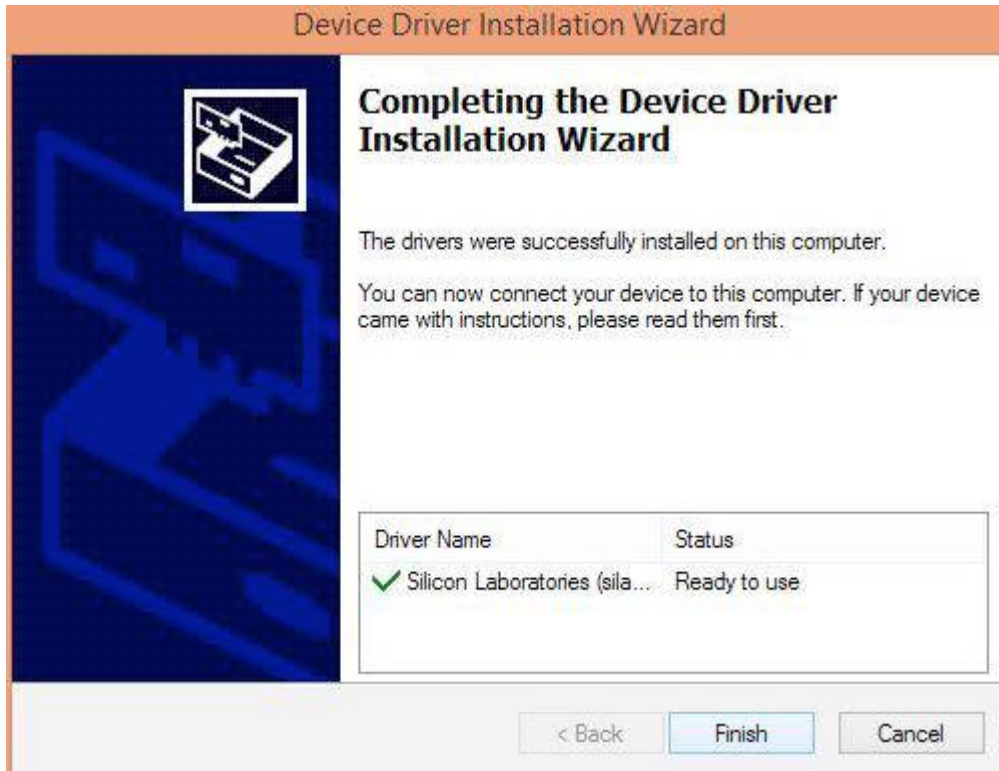

The driver installation for the Spooky2-XM generator completes. Click Finish. Now you have Spooky2 software successfully installed.

Windows Warnings

There are two very important settings in Windows that you need to be aware of when using Spooky2:

1. PC Sleep Settings:

When your PC sleeps or hibernates, Spooky2 will simply suspend, which will cause spooky to lose control over the generators. The generators will freeze and will become locked transmitting the same frequency. It will not be good for your health.

To fix this, go to Control Panels > Power Options > Change when the computer sleeps, and set everything except the screen to

Never. Alternatively, you can use a dark screen saver to extend display life (Control Panels > Personalization > Screen Saver).

2. Windows Update Reboots:

If your PC is also used for the internet, Windows can download and install updates automatically. It can then quit Spooky2, install the updates, and restart your PC – ending your entire Spooky2 session without any warning to you.

To fix this, go to Control Panels > Windows Update > Change settings and choose anything other than Install updates automatically. If you don't want to lose this auto-install functionality, you can simply switch off your modem/wi-fi router or unplug your ethernet cable before going to sleep or leaving your home. Please note on Windows 10 you may not have the option of turning off updates.

Possible Windows Install Errors

1. Runtime Error xxxx: Invalid Port Number:

This is a Windows error and normally indicates that the PC is confused about exactly what's connected to its USB ports. It's usually resolved by restarting the PC.


2. Remedies for driver problems:

Sometimes, an incorrectly configured PC or other software already installed can interfere with driver installation calls. You can fix this by installing drivers manually. Here's how:


Click the *Utils* menu on the menu bar and choose *Install Spooky2-XM Drivers* command to install the driver. When the installation process is done, quit everything and restart your PC. Then turn on Spooky2 XM generator and launch Spooky2 software. The generator should be detected.

Software Interface

Now we'll take a quick look at the interface of Spooky software. The first screen you'll see is the *Presets* tab in Simple View:

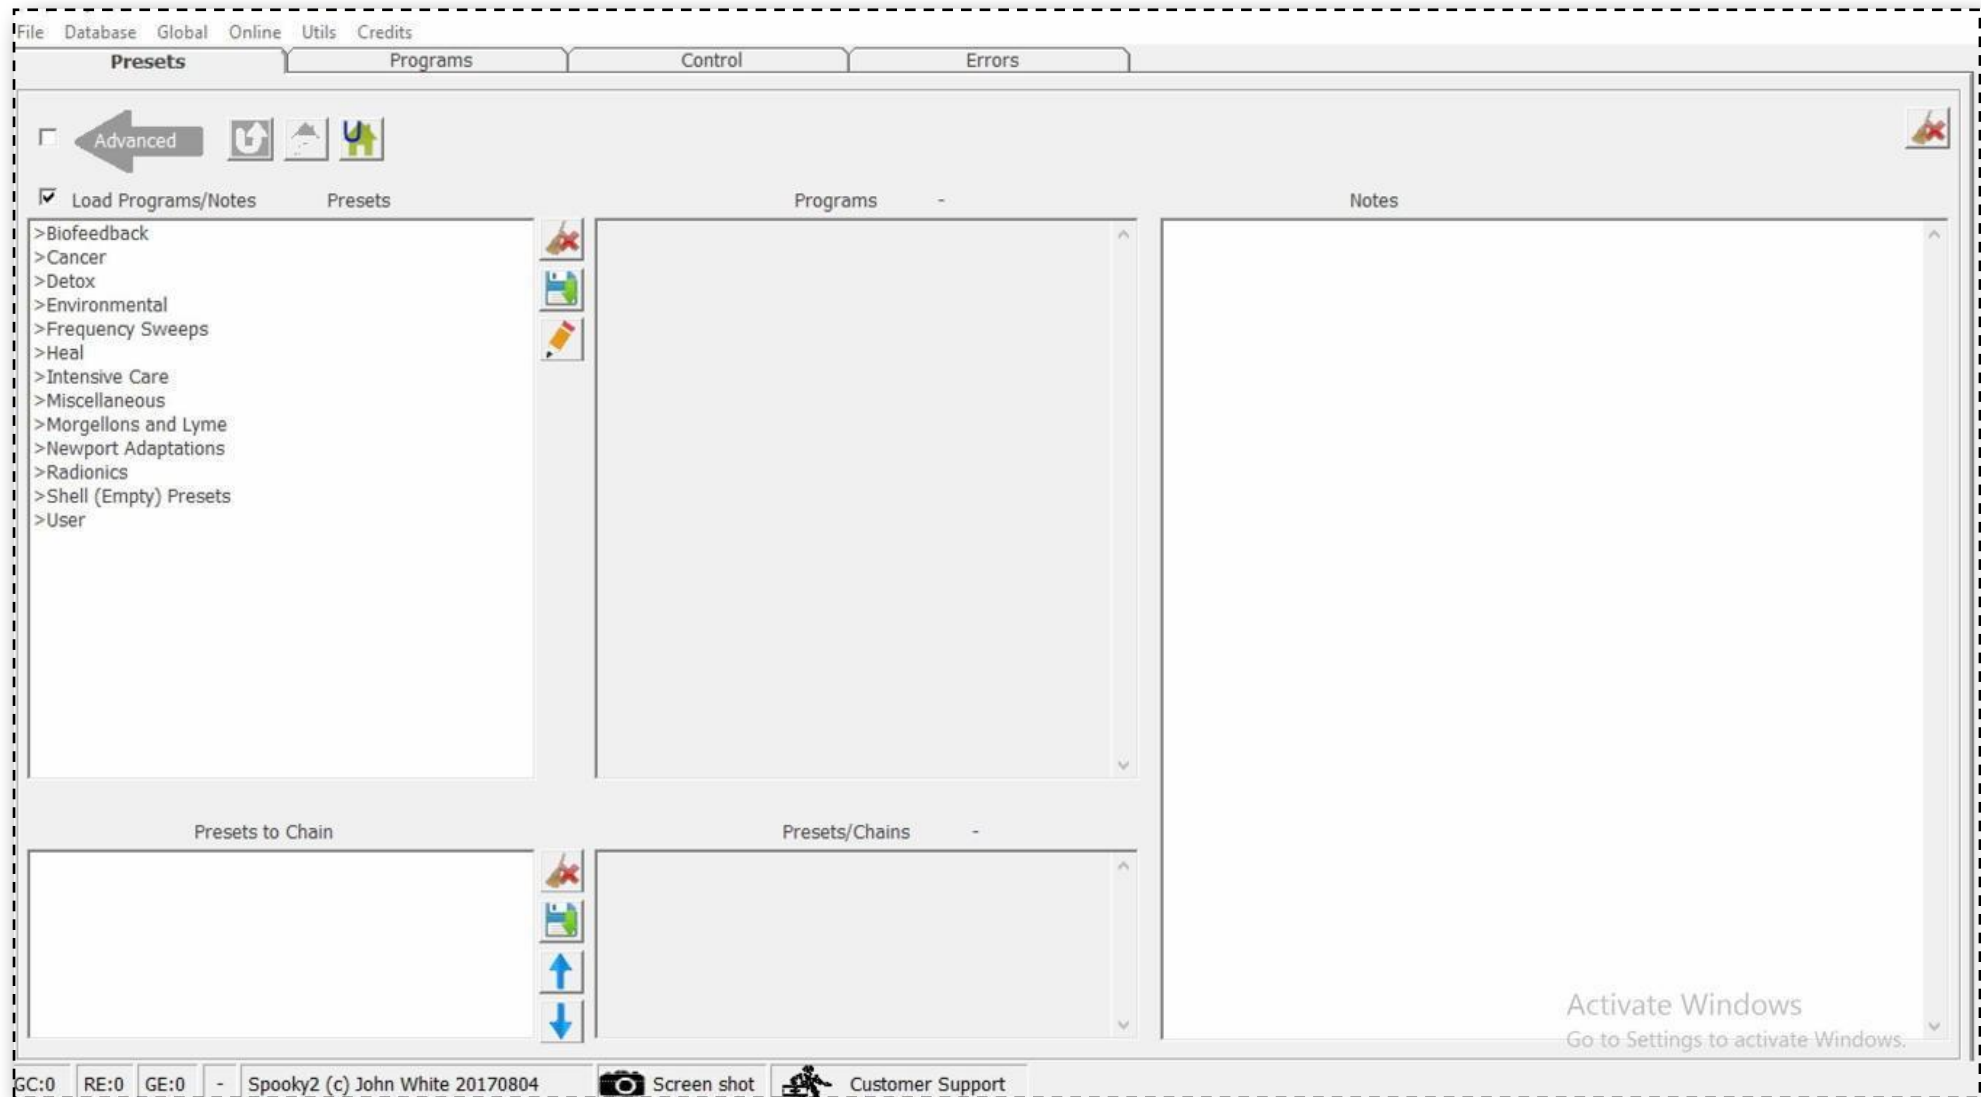

Simple View has four tabs – *Presets*, *Programs*, *Control*, and *Errors*. Tick the box by the *Advanced* arrow (top left) to see:

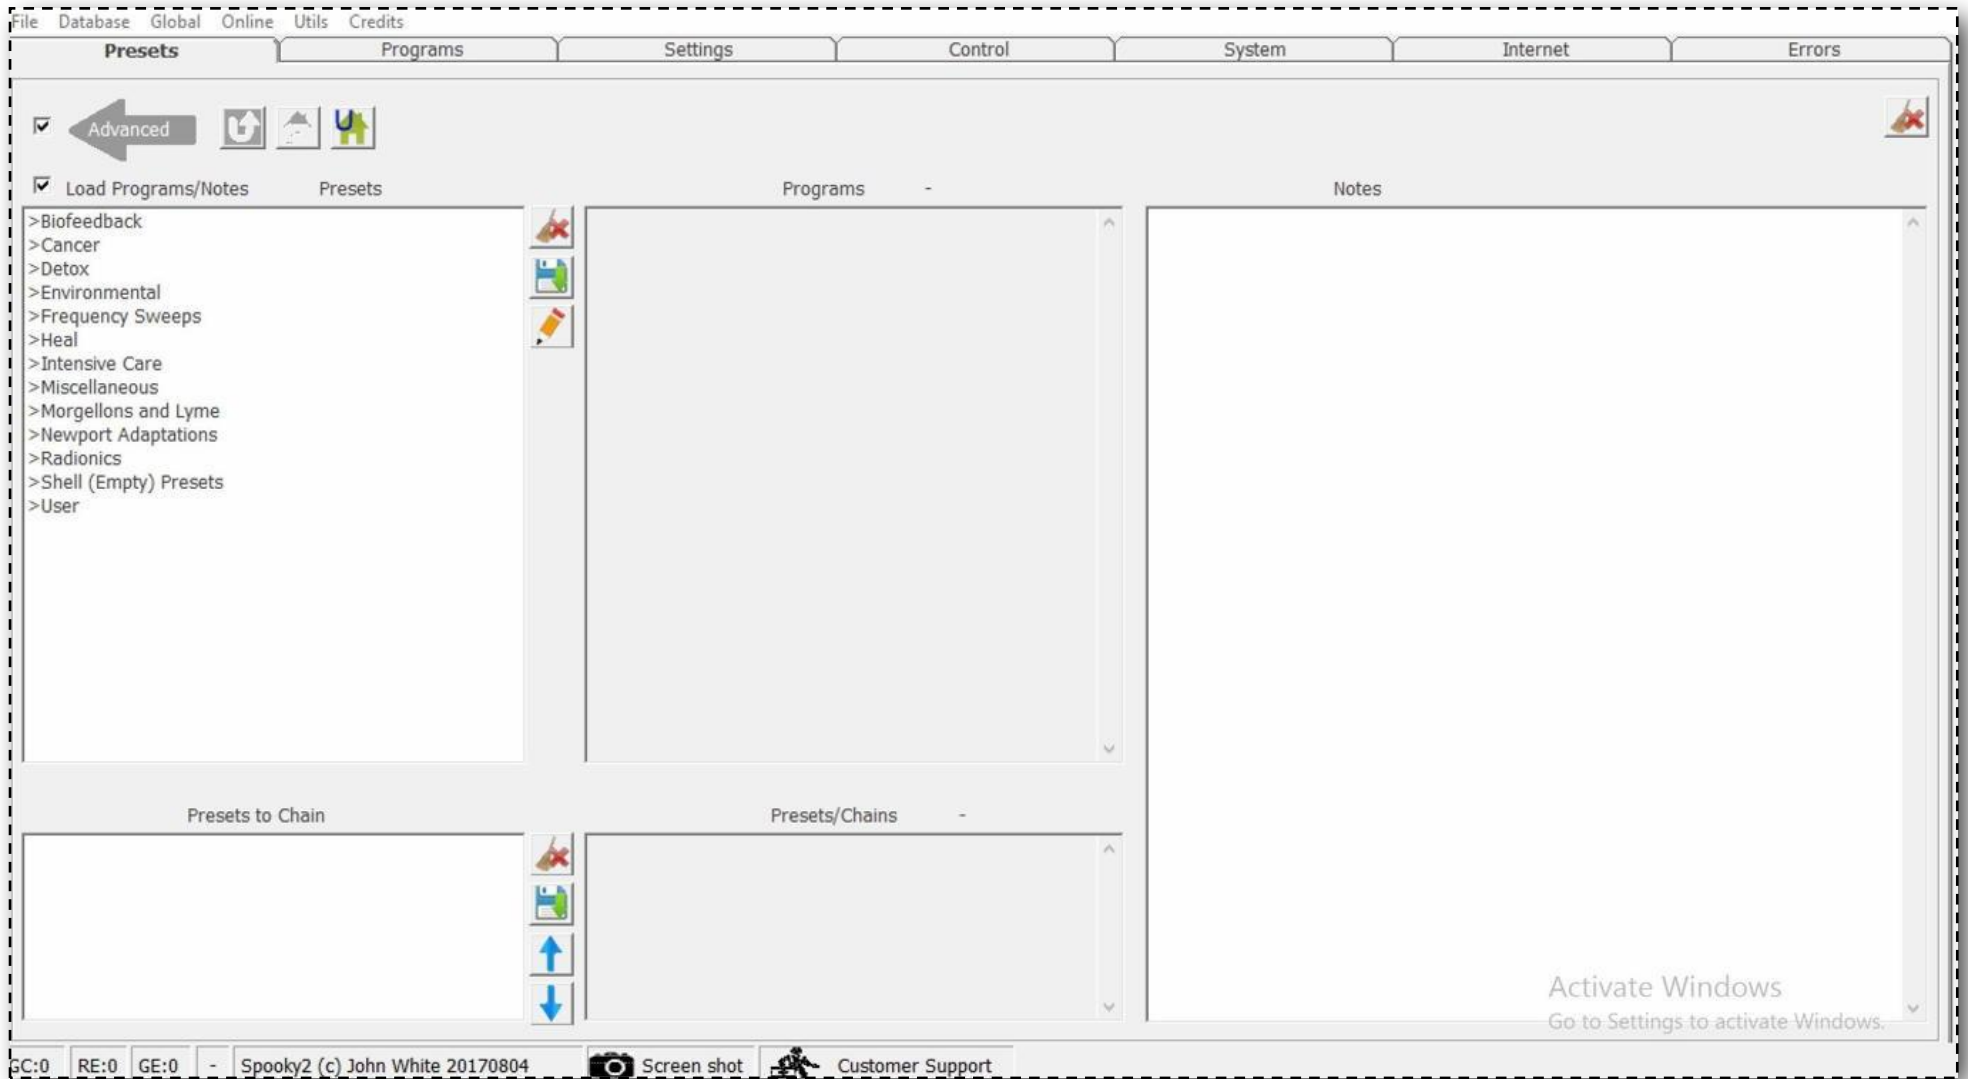

Advanced View displays an additional three tabs – *Settings*, *System*, and *Internet*. The main body of the *Presets* window remains unchanged.

You're now ready to begin setting up your Spooky² Rife System.

Treatment

To start a treatment, there are three simple steps:

1. Connect Spooky2 accessories.
2. Turn on the generator.
3. Launch Spooky2 software and choose presets and/or programs to run.

There are two types of preset, factory preset and shell preset. Factory presets include software settings and programs. How to run a factory preset will be showed in the remote mode. And how to run a shell preset will be showed in the contact mode. The setting ways of other transmission modes are the same. Now let's start rifting!

First, hook up the generators to your PC:

Connect the power plugs into your generators. Now connect your generators to your PC with the USB cables and turn them on now. Next connect the transmission device of your choice to the generators.



这个图片要换，先暂时用一下。

Remote mode

Step 1

First, connect Spooky boost to the generator then connect Spooky Remote v2.0 to the BN port of Spooky boost.



Step 2

Put your DNA into Spooky Remote. It is suggested using fingernails as DNA sample.


Here's how to package your nail clippings using paper tape:

1. Put your fingernail on the sticker. Then use another sticker to cover it.
2. Write a name on the sticker.
3. Open the remote to put your fingernail.
4. Close the remote.



Step 3

Turn on generator and launch Spooky2 software. Here will show you how to run a factory preset.
First select *>Detox*, and then the *>Remote* sub-collection. Next, select *Terrain (R) - BY*, which is a factory preset.

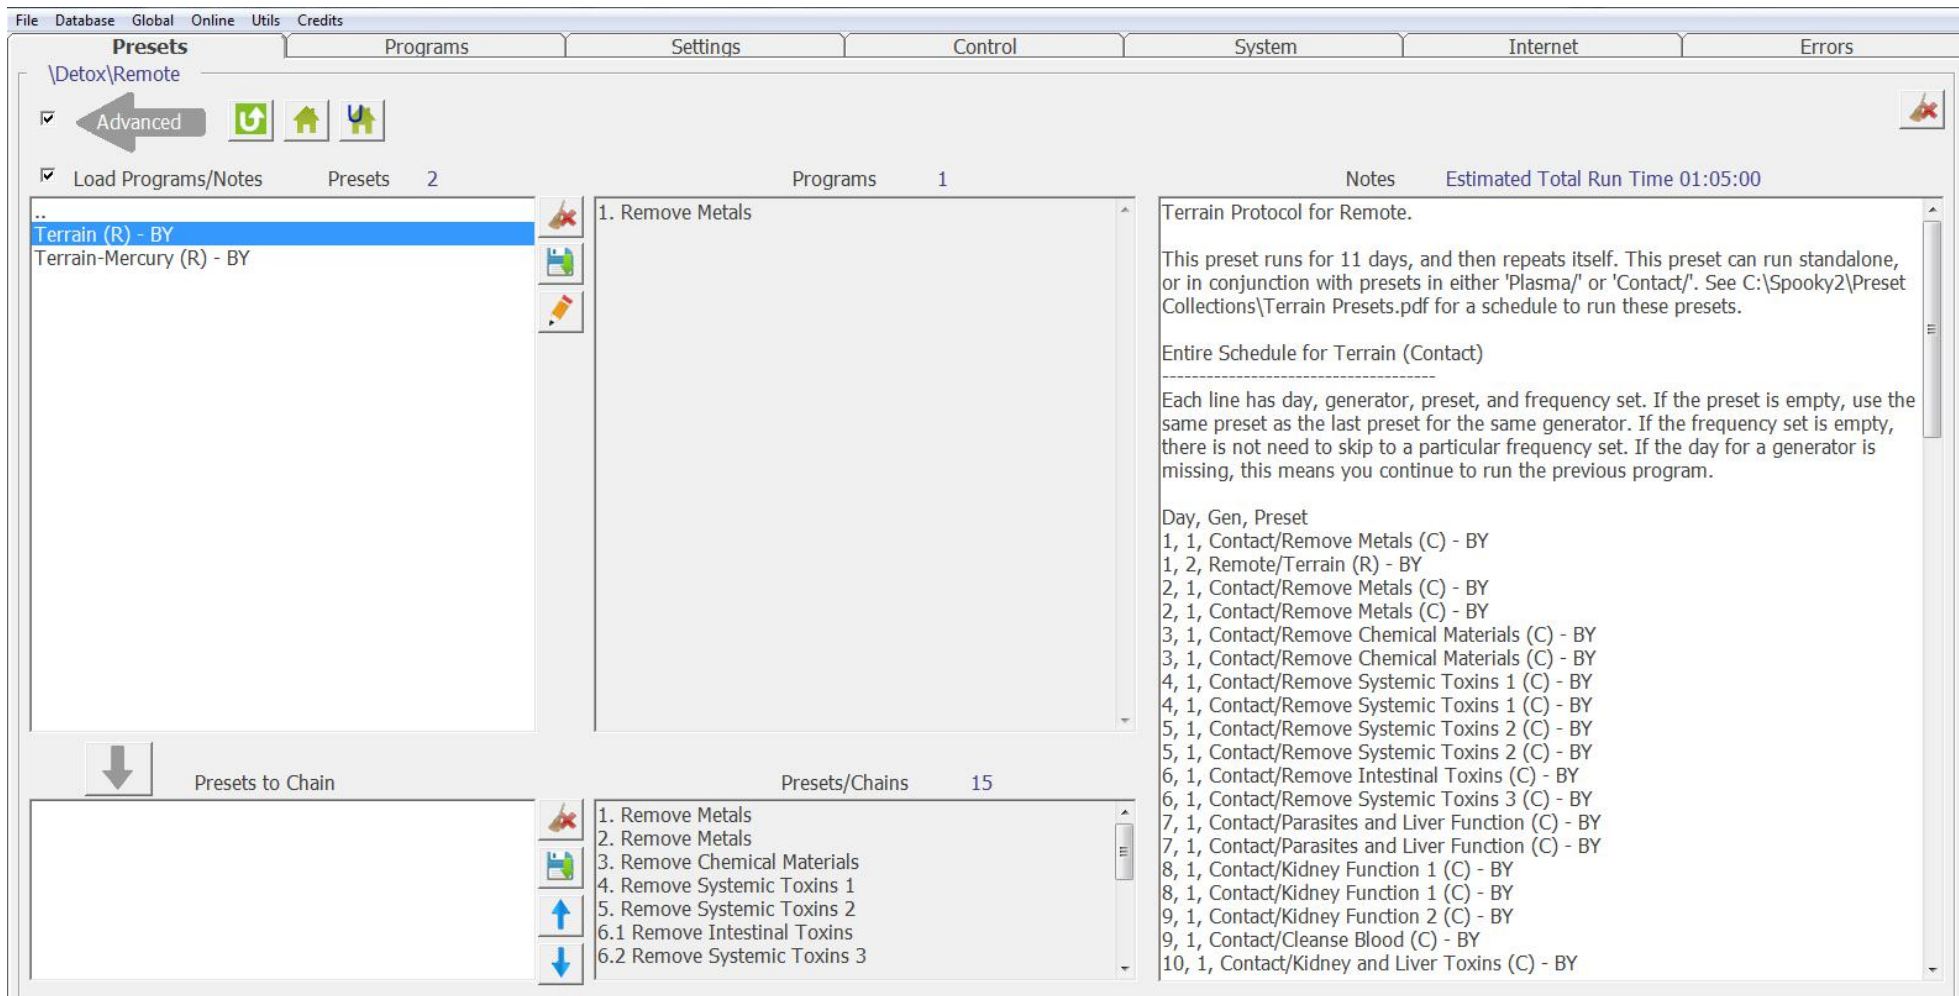

Go to Control Tab, tick Allow Generator Overwrites, open a generator button. After the frequencies are loaded, you can click Start button to start the treatment. Then, you will see both of the LEDs on Spooky Remote light up.

FileDatabaseGlobalOnlineUtilsCredits

PresetsProgramsSettingsControlSystemInternetErrors

Generators

☒ Allow Generator Overwrites

60%

VG0%

File
Database
Global
Online
Utils
Credits

Presets
Programs
Settings
Control
System
Internet
Errors

Generators

☐ Allow Generator Overwrites

6
0%

Generator 6
1. Remove Metals

Start
Pause
Hold
Amplitude Wobble
Frequency Wobble
Stop

364.56
393
16724.61
47
48
49
75
317
1902
4202.3
5333.69
Q887

Dwell 0
Step 1
Preset 1

Total : 180
Total : 19
Total : 15

Frequency Adjustment Slider

+/- 1 Hz

Biofeedback Scan

Start Frequency 76000 Hz
Finish Frequency 152000 Hz
Initial Step Size 20 Hz
.025 %
Decimal Places 0
Max Hits to Find 20
Samples/Step 1
Start Delay 30 Samples

Detect

☒ Max
☐ Min

☒ BPM
☐ HRV

BPM -
HRV -

Calculate Using

☒ Running Average
☐ Peak
☒ 2 DP Max
☒ Single Scan
☐ Grade Program

Av. BPM -
Av. HRV -

01:03:50

Scan

Estimated Total Run Time 01:05:00
Current Preset Duration 00:00:00
Current Chain Duration 00:00:00

1. Remove Metals

Reverse Lookup

☐ Include Octave
☐ Search CUST database
.1 % Tolerance
Include 0 Hz in search

Go

Generator Output

Out 1
Frequency 0
Waveform Square
Duty Cycle 50%
Amplitude 0v
Offset 0%
Phase Angle 0 Degrees

Out 2
0
Inverse+Sync
50%
0v
0%
0 Degrees

Reset

48

File Database Global Online Utils Credits

Presets Programs Settings **Control** System Internet Errors

Generators

☐ Allow Generator Overwrites

6
5%

Generator 6 1. Remove Metals

Start Pause Hold Amplitude Wobble Frequency Wobble Stop

364.56
393
16724.61
47
48
49
75
317
1902
4202.3
5333.69
9887

Dwell 5 Total : 180
Step 1 Total : 19
Preset 1 Total : 15

Frequency Adjustment Slider

+/- 1 Hz

Estimated Total Run Time 01:05:00
Current Preset Duration 00:00:06
Current Chain Duration 00:00:06

1. Remove Metals

Reverse Lookup
☐ Include Octave
☐ Search CUST database
.1 % Tolerance
Include 0 Hz in search

Go

Generator Output

	Out 1	Out 2
Frequency	364.56	364.56
Waveform	Square	Inverse+Sync
Duty Cycle	50%	50%
Amplitude	5v	5v
Offset	0%	0%
Phase Angle	0 Degrees	0 Degrees

Sync

Reset

Biofeedback Scan

Start Frequency 76000 Hz
Finish Frequency 152000 Hz
Initial Step Size 20 Hz
.025 %
Decimal Places 0
Max Hits to Find 20
Samples/Step 1
Start Delay 30 Samples

01:03:50 Scan

Detect
☒ Max ☐ Min
☒ BPM
☐ HRV

Calculate Using
☒ Running Average
☐ Peak
☒ 2 DP Max
☒ Single Scan
☐ Grade Program

BPM - Av. BPM -
HRV - Av. HRV -

0 1

VG
0%

Note:

1. You can choose any remote presets in the software.
2. Do not mix DNA samples together in Spooky Remote without isolation.

Contact Mode

Step 1

We have many different kinds of contact accessories, including Spooky Conductive Carbonized Rubber Hand Cylinders, Tens pads, Tens Contact kit, Tens Internal Electrode, etc. Here we will take Tens pads as an example.

First, connect Spooky boost to the generator. Then connect a pair of TENS pads to the High Power port of Spooky boost.




Step 2


Turn on generator and launch Spooky2 software.

You can run factory presets using contact the same way as shown in Remote mode, but here we will show you how to run a “*Shell Preset*”, where you need to choose your own programs.

For example, I’d like to treat my disc:

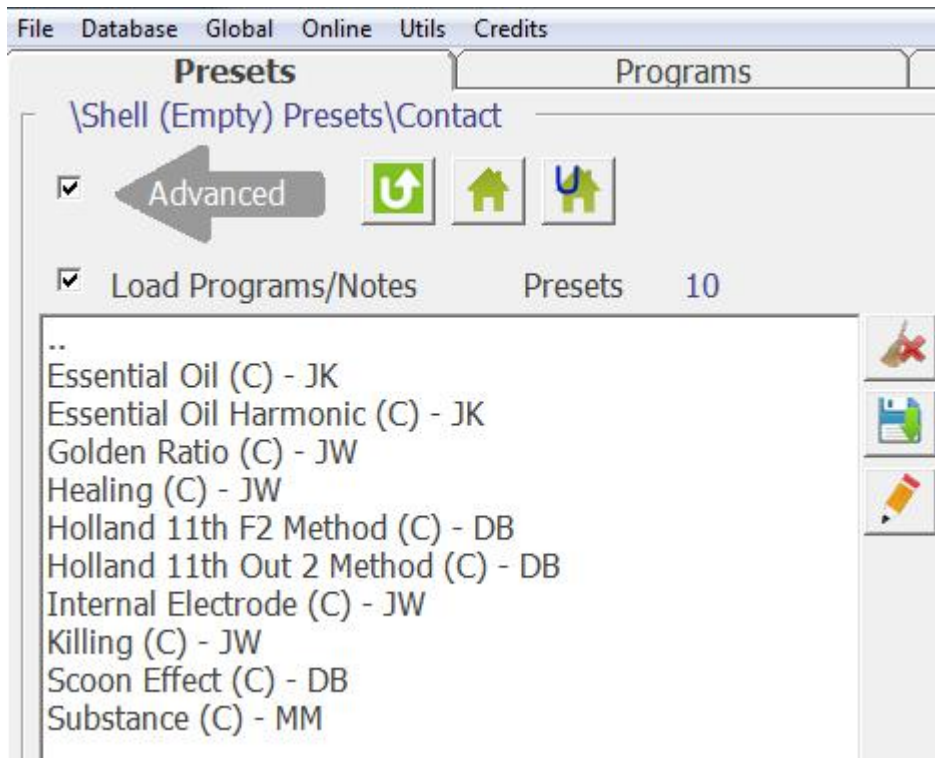


First select >*Shell (Empty) Presets*, and then the >*Contact* sub-collection. Next, select *Healing (C) – JW*.

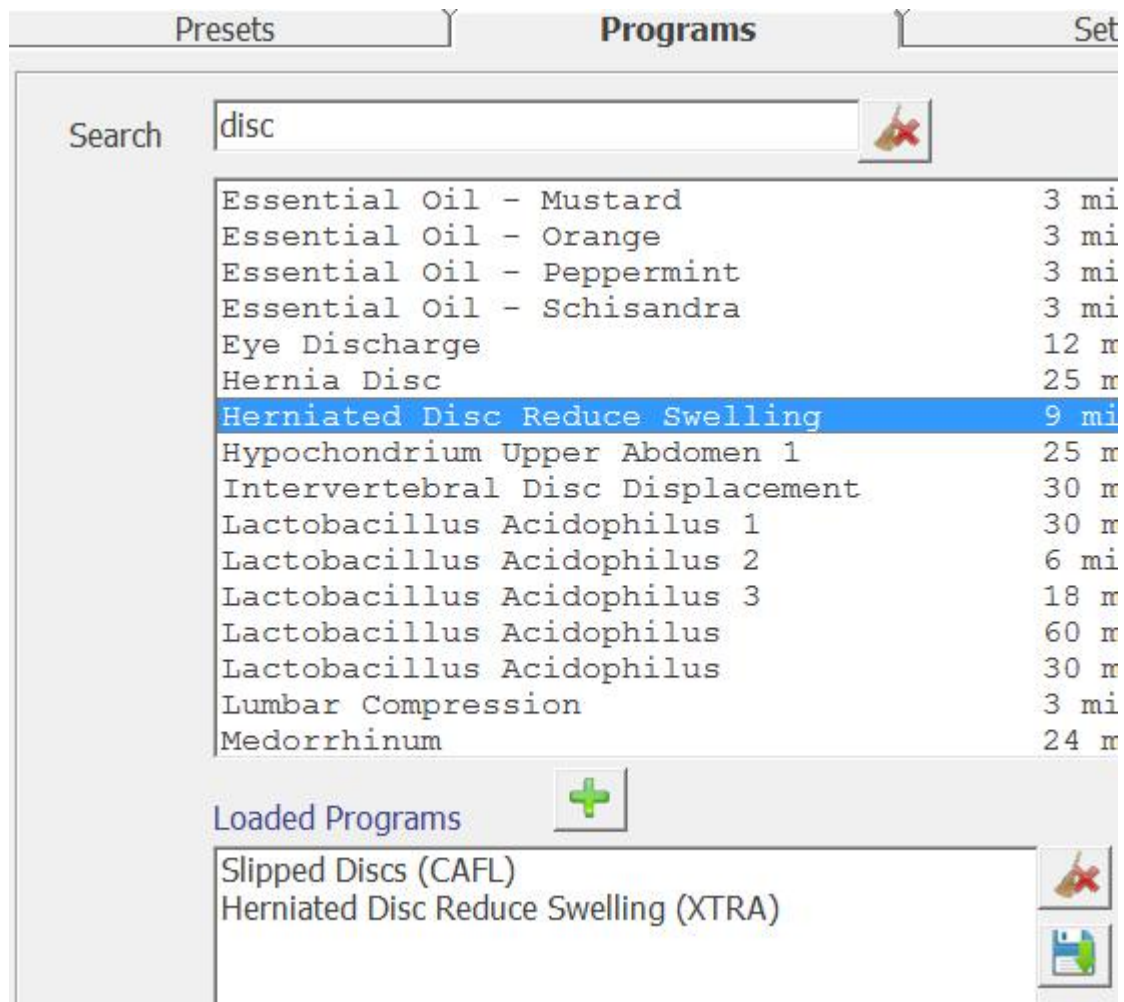

Now you must search for and load the programs you need. So click the Programs tab.


Type “disc” into the Search field and get 258 results. Double click Slipped Discs CAFL, followed by Herniated Disc Reduce Swelling XTRA.

You will see that both programs are now present in the Loaded Programs column above. Now it’s time to save your work, so return to Presets and click the Save button.

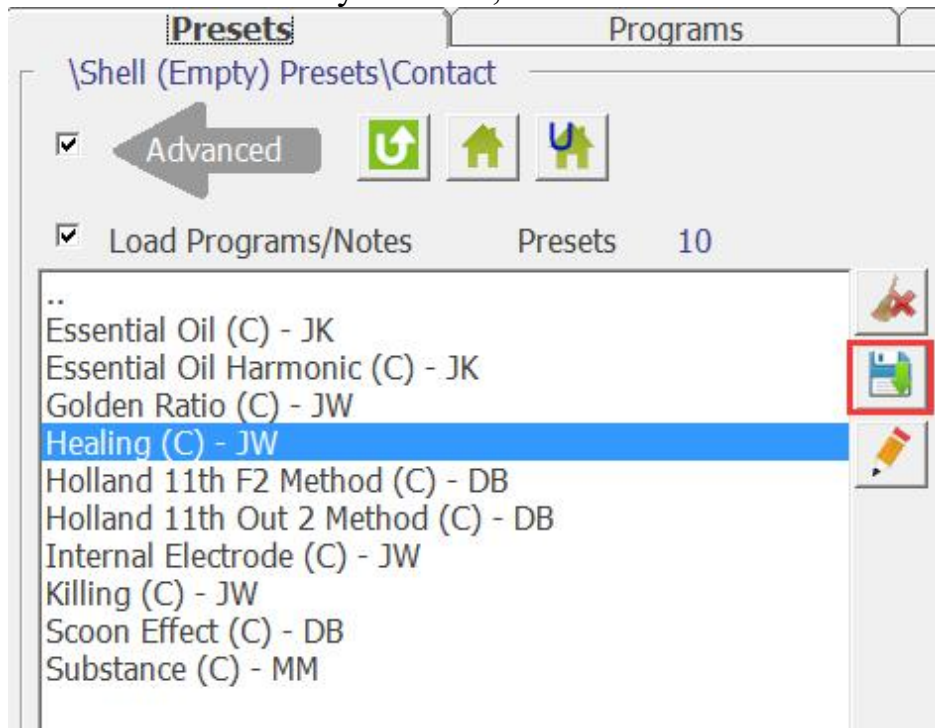


Spooky2 takes you to the User folder – which is where your User preset collection is stored.

Since this is a contact preset, double click the Contact folder to open it and save into.

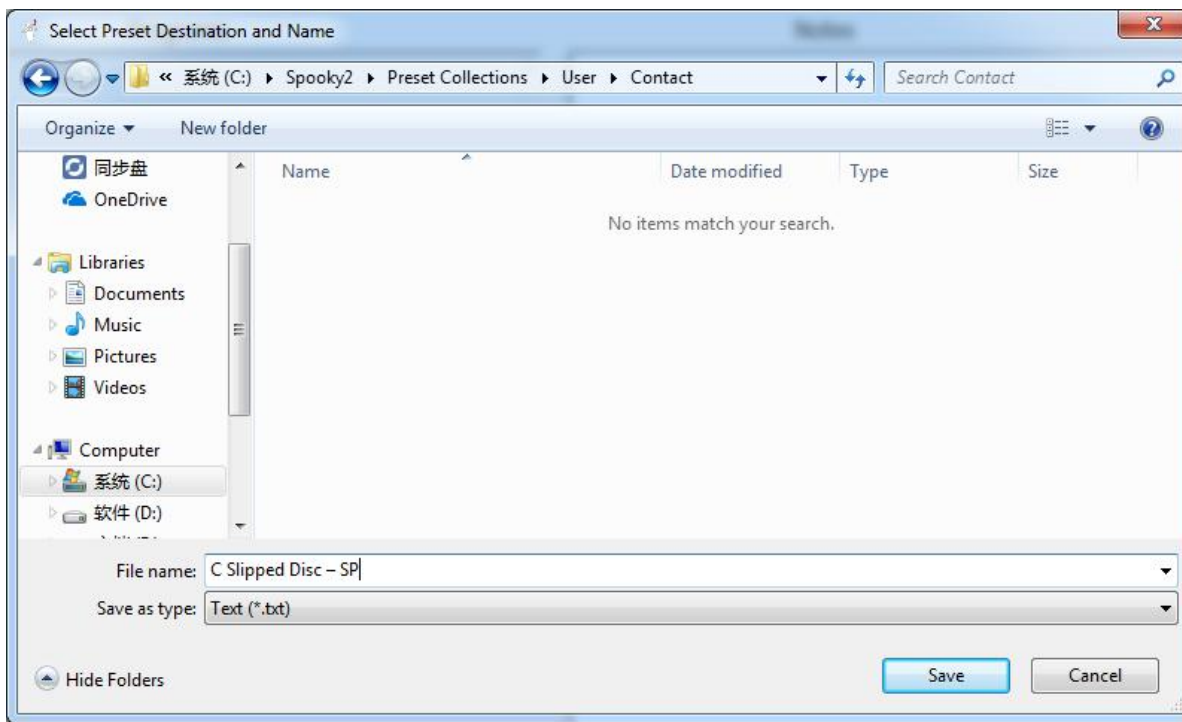

Once again, since this is your first contact preset, the folder is empty:

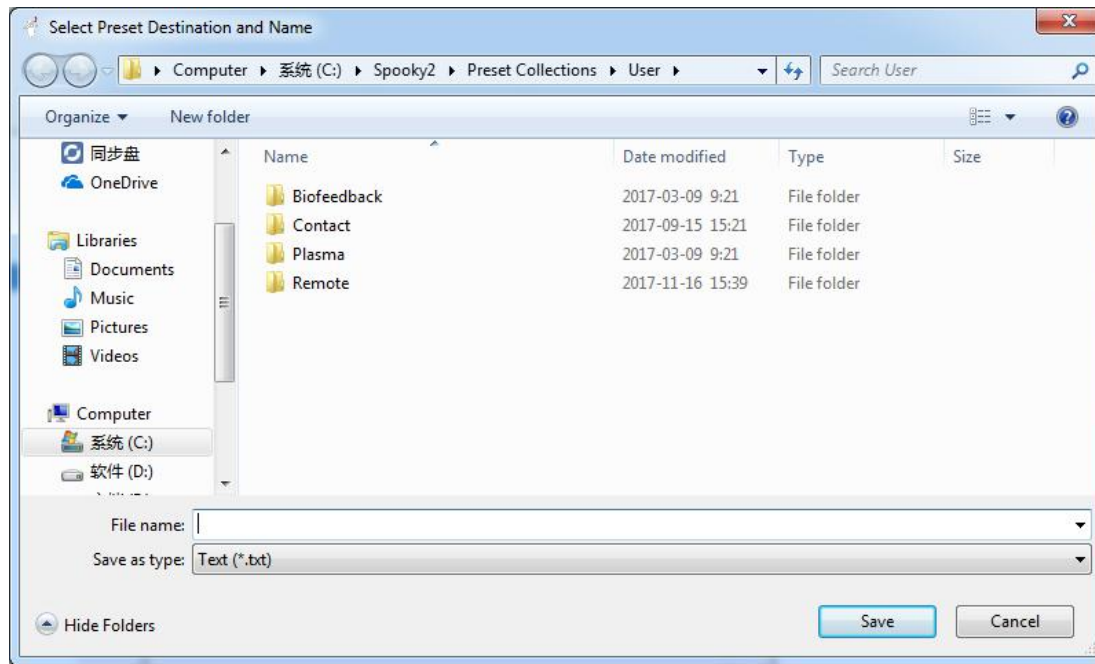


In the File Name field, type:

C Slipped Disc – SP


The “C” is to remind your that this is a Contact Mode preset.


Click the *User* button in the Presets tab, then the >*Contact* sub-collection, and you see this:

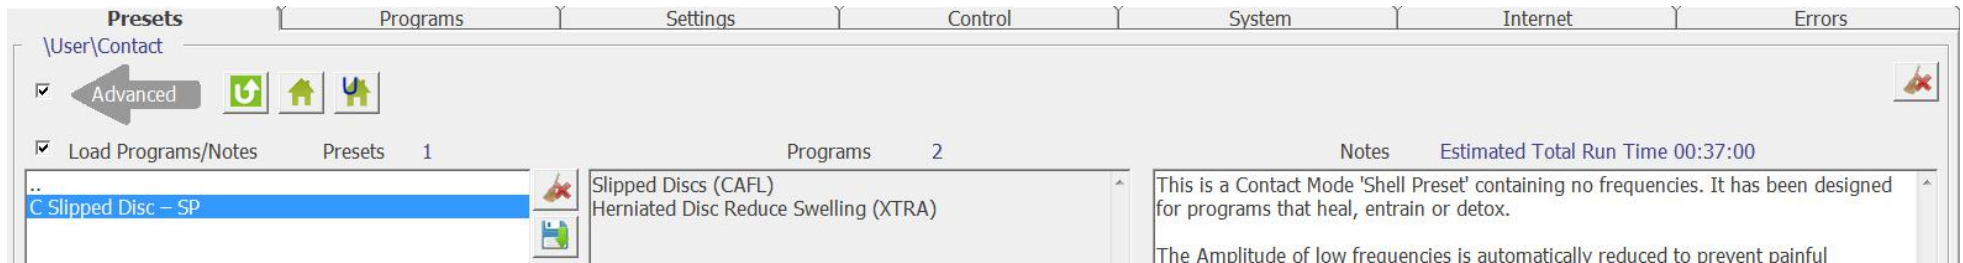

Your new preset is waiting for you, so select it to load it.

Then go to the *Control* tab. First tick the *Allow Generator Overwrites* checkbox, then the generator button you're using. You can now click *Start* and get some relief.

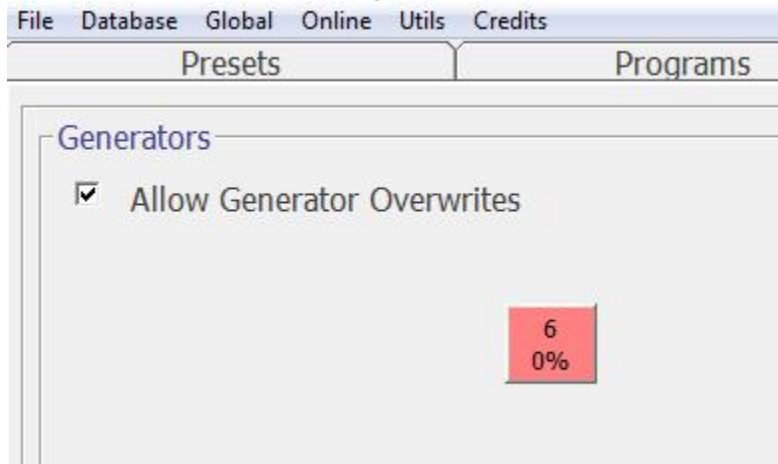

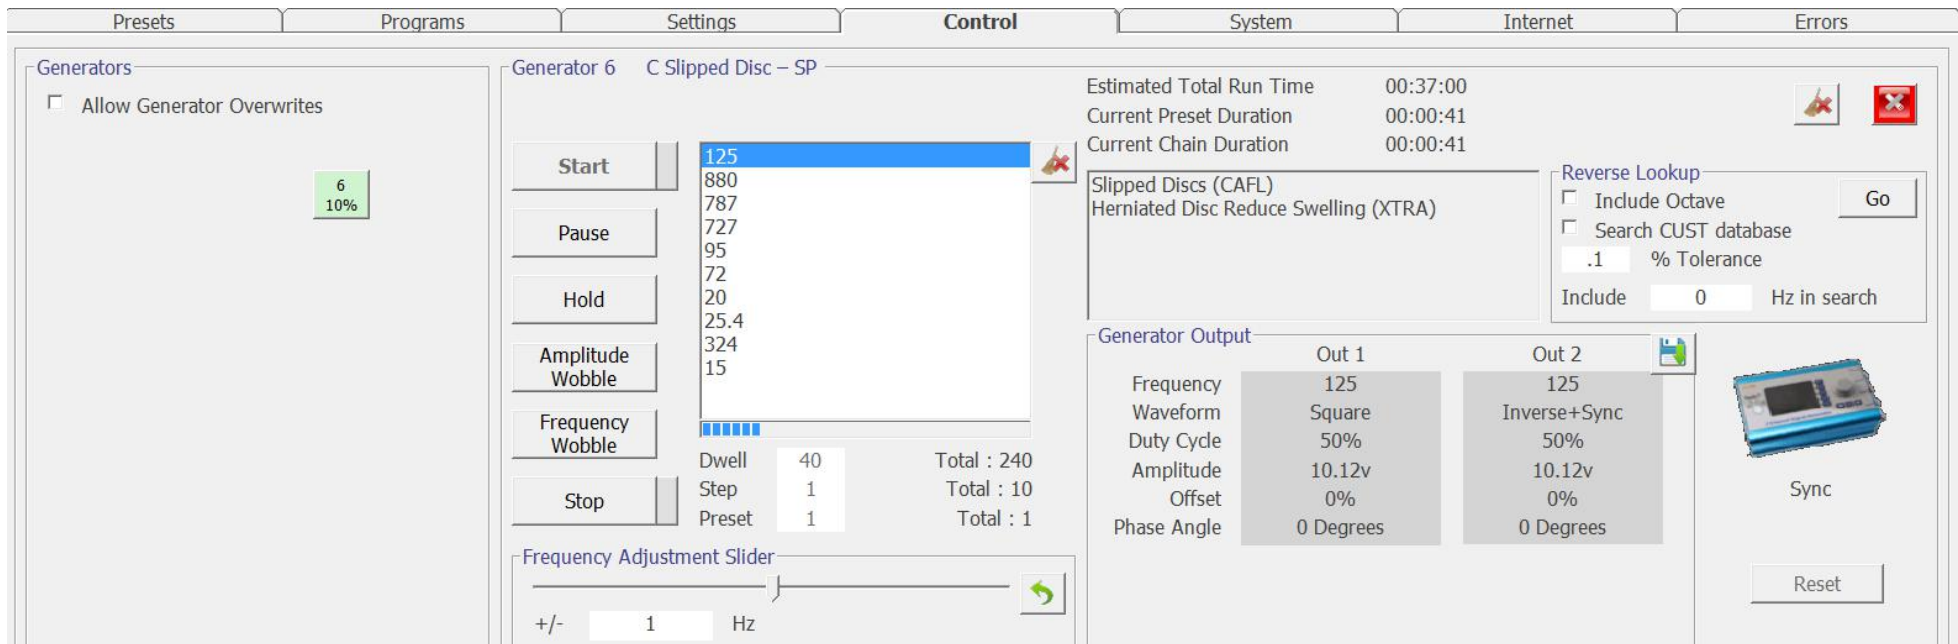

Note:

1. Do not use 100% offset for contact mode.
2. Do not put TENS pads above the neck and keep them away from the heart.
3. Do not use contact mode if you have pacemaker or electrode implants.
4. Do not use more than one contact accessory on your body at a time.
5. You can use any contact presets for contact accessories in the software. Tens Internal Electrode has its own preset.
6. The setting way of all the contact accessories in the software is the same.
7. If the voltage is too high for you, you could use the Boost's Colloidal Silver output instead.

Cold Laser

Step 1

Connect Spooky Cold Laser Twin or Wrist to the Out 1 of Spooky XM generator. Do not use a Boosted output from Spooky Boost. You can also use the OUT1 of your Spooky boost.





Step 2

Turn on the generator and launch Spooky2 software.

There are two kinds of Spooky Cold Laser Presets:

Spooky Cold Laser - JW

Acne (Spooky Cold Laser) - JW



Spooky Cold Laser - JW is a shell preset, which needs to add the programs you wish to run.

Acne (Spooky Cold Laser) - JW is a factory preset, which has been designed to treat Vulgaris Acne. The same preset can be used for other conditions because it stimulates the body's natural immune system.

Step 3


Laser Placement


Spooky Cold Laser Twin can be inserted directly into your nostrils, ear, navel, or acupuncture points (meridians). Placing the lasers further from the target can treat larger areas.

Laser covers are provided for Spooky Cold Laser Twin. Clean them with warm, soapy water, rinse, and dry between use.



Spooky Cold Laser Wrist is primarily designed to be strapped onto the underside of your wrist. This treats your carpal tunnel and the blood passing through the radial artery. It is also ideal to treat larger skin areas if long treatment times are desired.

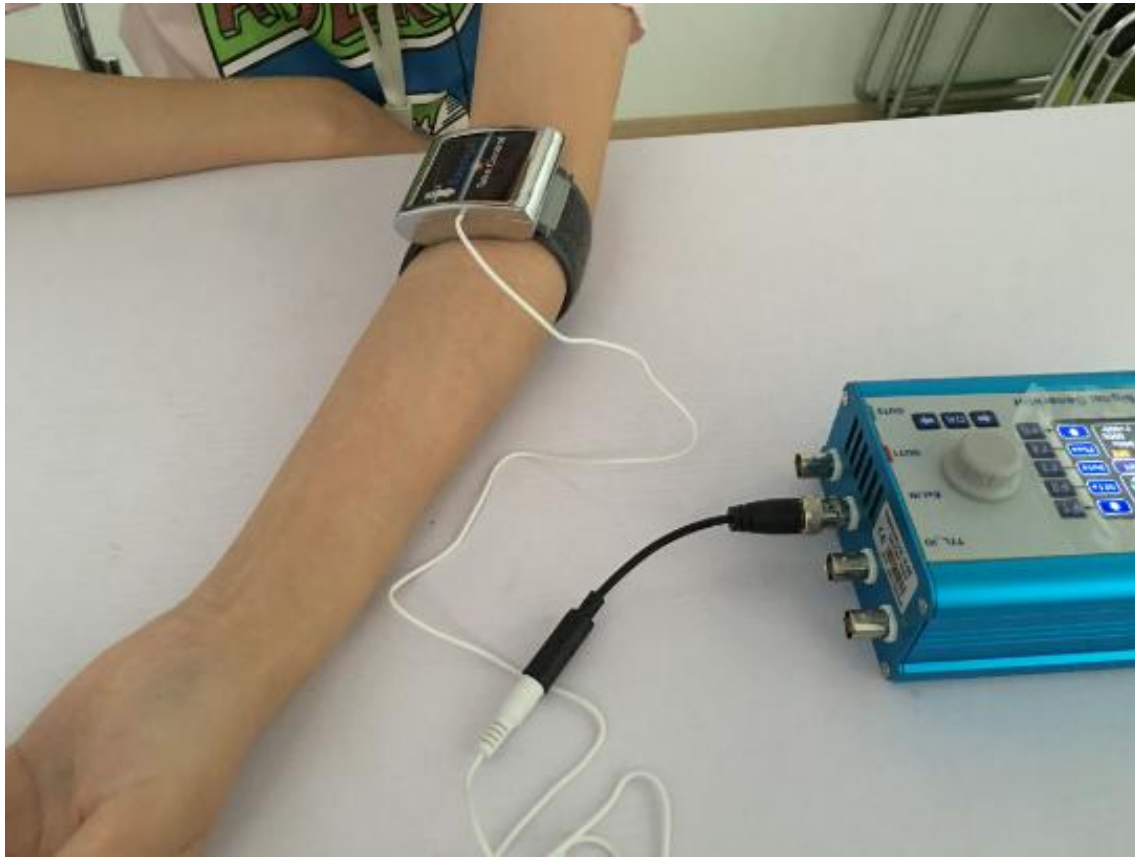

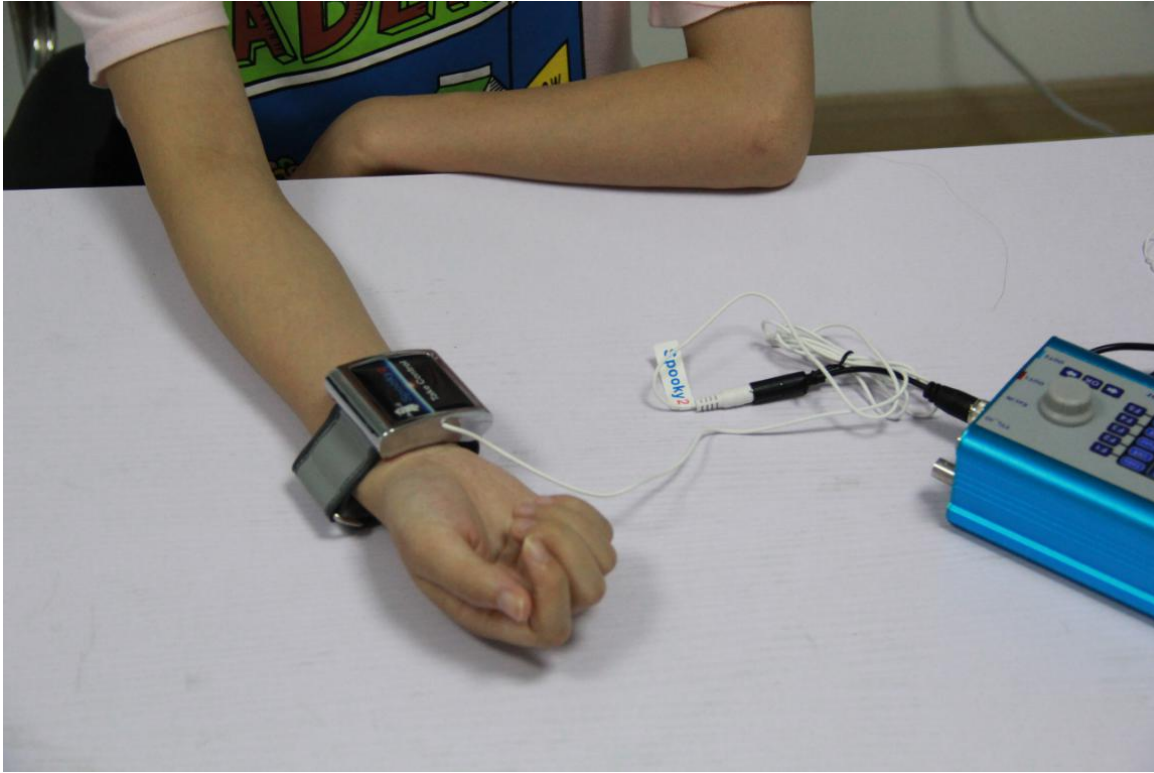



Notes:

1. Never shine the light of lasers directly into your eyes.
2. Do not allow children to play with Spooky Cold Laser.
3. Do not use Spooky Cold Laser in wet areas.
4. Do not use any other device to control Spooky Cold Laser.
5. Do not use Cold Lasers over any cancerous spots or your thyroid.

PEMF coil


Step 1

First, connect Spooky boost to the generator, and then connect the PEMF coil to the High Power Port of Spooky boost.



Step 2

Turn on Spooky2 XM generator and launch Spooky software.
The preset for PEMF coil is called Spooky Coil (XM Direct) - JW

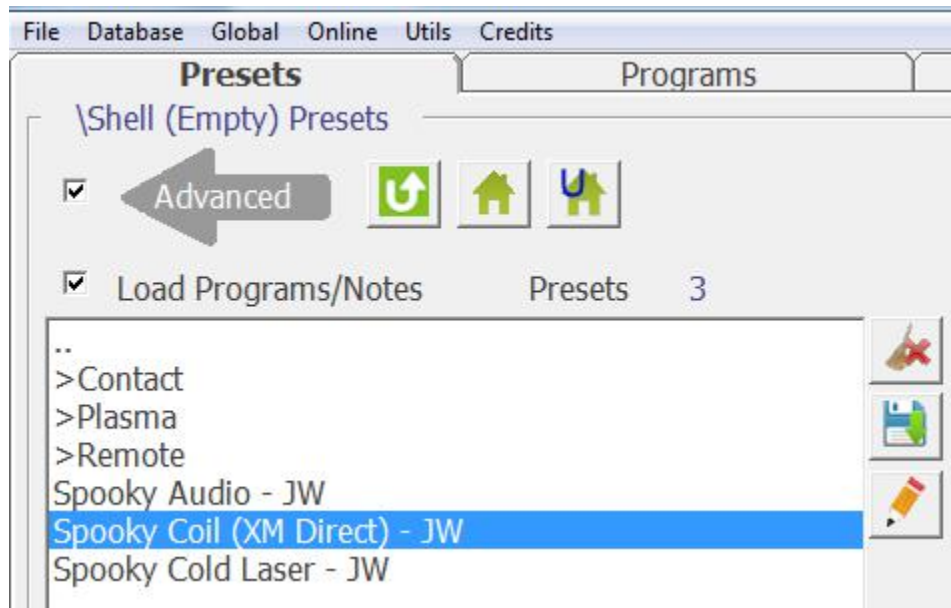

Step 3

Use the BN side to touch the skin. The coil can be used for entrainment.



Note:

1. Do not use a PEMF coil if you have a pacemaker or other electronic implants.

TENS Internal Electrode

Step 1

First, connect a Spooky boost to the generator, then connect the TENS cable to the Colloidal Silver port of Spooky Boost. Connect each black and red pin of the TENS cable to the Tens Internal Electrode. The treatment area will be between the electrodes as shown in below picture.



Alternatively, you may connect one TENS cable wire to one of the Internal Electrode wires, and the other TENS cable wire to a regular TENS pad. The treatment area will be the straight line between the electrodes as shown in below picture. The distance between electrodes is much greater using this method, allowing the prostate gland and bladder area to be treated.



We recommend you initially use the safe, low-power Colloidal Silver port of Spooky Boost. If you want more power, you can use the 'High Power' port of Spooky Boost.

Step 2

Internal Electrode Insertion:

We recommend liberal use of gel or water. Insertion is easier, and the electrical connection is improved. Keep the gel away from the cables.

Carefully and slowly insert the internal electrode into the anal canal or vagina.


Place the (optional) secondary TENS pad on your chosen location.

Plug the TENS electrical cable firmly into the electrodes.

Choose a comfortable position. It is best not to move during treatment, as this may dislodge the electrode.

Step 3

Turn on Spooky2 XM generator and launch Spooky2 software. Load the Internal Electrode (C) - JW preset in Spooky. This is a “Shell Preset” containing no frequencies. Select the program(s) best suited to your condition to run.

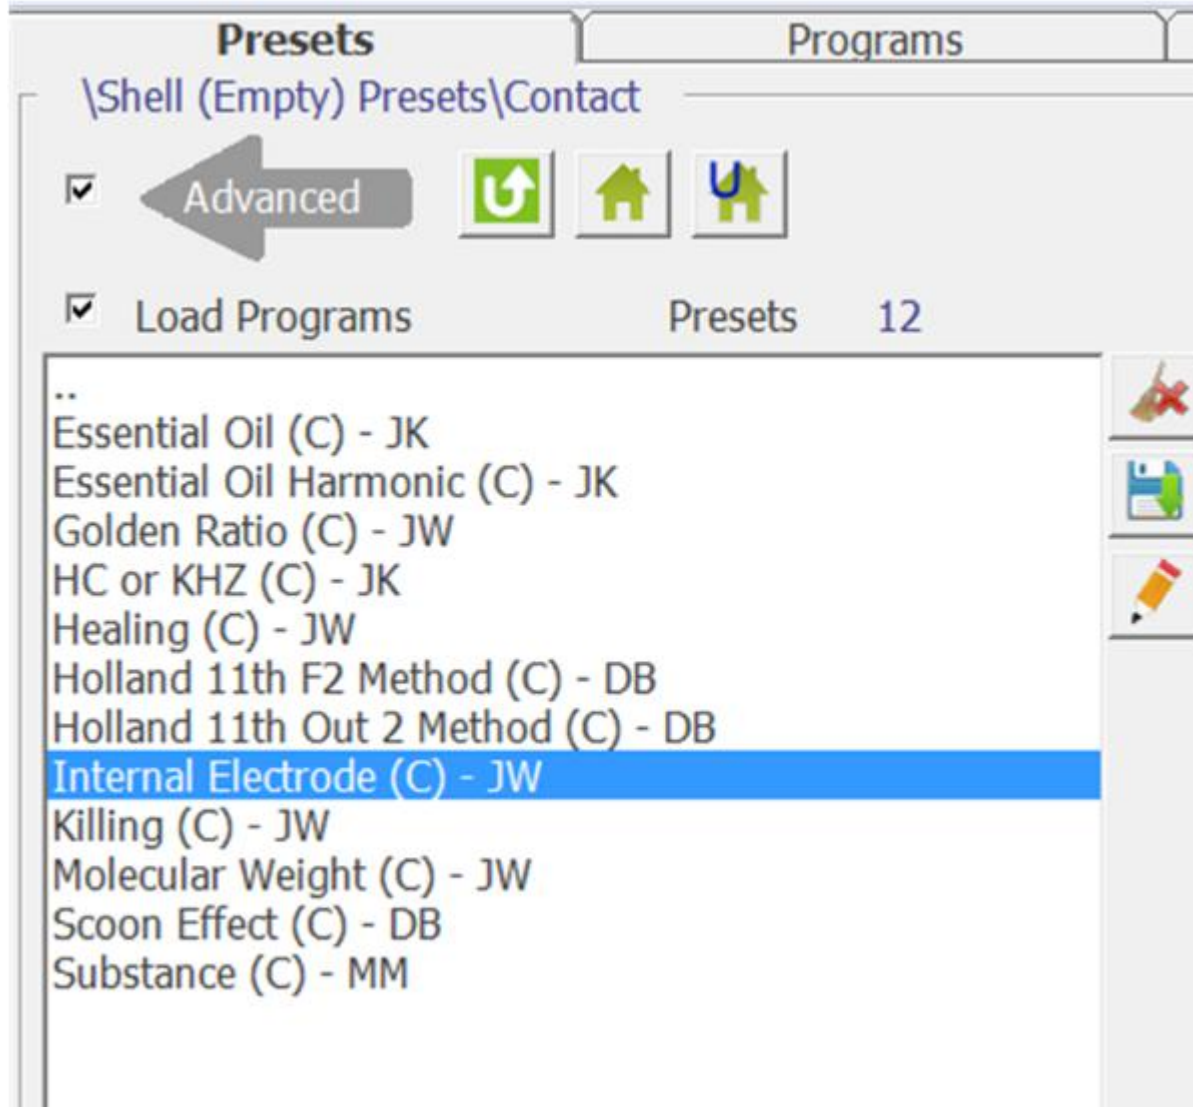

Notes:

1. Do NOT immerse the electrode in water.
2. Do NOT use if you are pregnant.
3. Do NOT use if you are wearing, or have implanted, any electronic medical devices.
4. Stop immediately if you feel any discomfort.
5. Always clean the TENS internal electrode before and after each use. You can clean with an antibacterial wipe or with warm soapy water. Rinse and dry the electrode thoroughly. Be careful to keep the wires dry.

Spooky Central

Step 1

Making connections

1. Connect your generator to Central. Out 1 goes to Input, and Out 2 connects to Modulation.
2. Connect your ultrasonic transmitter to the short adaptor plug, then insert this into the Ultrasonic socket.
3. Connect your Hand Cylinders or TENS pads to the short adaptor cable, then connect it to Contact.
3. Connect your PEMF coil to Coil.



5. Connect your plasma tube to the rear high voltage sockets.
6. Connect your mains electrical cable to the socket on the rear of the machine.




7. Use the USB filter cable to connect your PC to the Spooky2-XM generator that's connected to Spooky Central.

After connection, now switch on Spooky Central. The power light will illuminate orange.

Step 2
Software settings

Launch Spooky2, select "Spooky Central Advanced - JW" from the Preset Menu, load the programs you wish to use, then run your Program. You can also use other Plasma presets for Spooky Central.

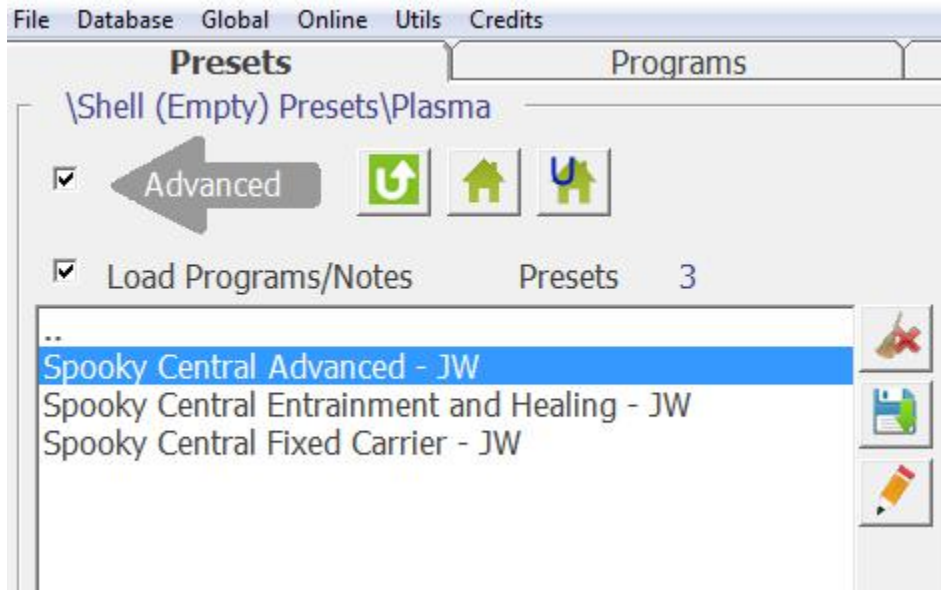

Note:

1. Never disconnect anything while Spooky Central is powered on – always switch it off first, then disconnect.
2. Spooky Central only accepts a 5 volt/100% offset square wave input. Any other voltage/amplitude or waveform may cause damage.
3. A Spectrum sweep can be used, but you must set it to use a square wave, with 5 as the value for Amplitude, and a 100% positive value entered in both Offset fields.
4. Input Duty Cycle (from Out 1) must be 50%. Modulation (Out 2) may have any Duty Cycle value.

Spooky Pulse

Step 1

Scanning measures your heart rate's reaction to frequencies. Please follow these suggestions:


1. Lie down flat on a comfortable bed.

2. Ensure that you're well hydrated.
3. Remain completely relaxed throughout the scan. Avoid movement. You can go to sleep or you can use peaceful, relaxing music instead.
4. You may use Remote or Contact Modes to input the frequencies. For Contact Mode, TENS pads are best, one on the back of the right hand, the other just below the outside ankle of your left foot. For Remote Mode, use a Remote and a fresh DNA specimen.
5. Because digestion uses very large amounts of energy, it's best to start a scan two hours after your last meal.
6. Turn off your cell phone and remove it from the room.
7. Make arrangements not to be disturbed.

Step 2


To start, connect Spooky Pulse via USB to the PC. Now launch Spooky2.

First, ensure that the Enable System Sounds option is ticked in the System tab. That way, Spooky2 will alert you via audio if something needs your attention.

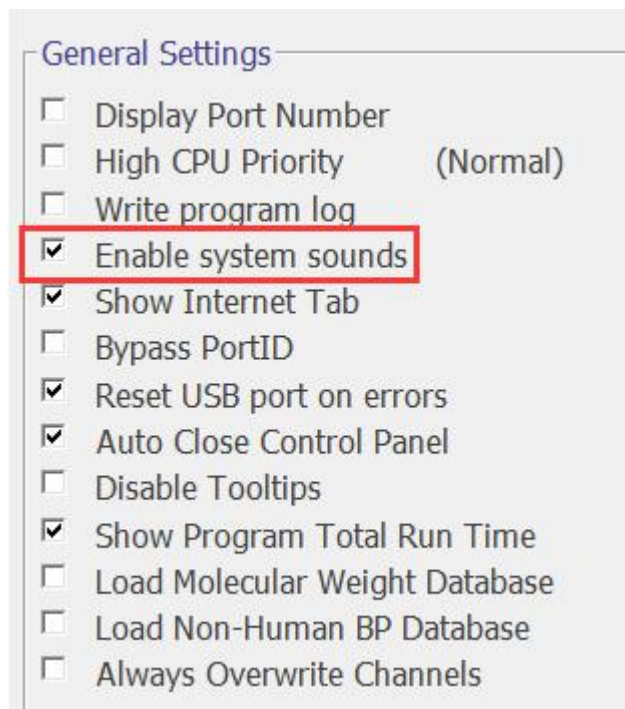

Step 3 Scanning

Dr. Rife and Dr. Clark found that most pathogenic organisms resonate at a frequency between 76,000Hz and 880,000Hz. This is the range – or bandwidth – scanned by the ALL Full System Scan – DB preset. To load this, go to Presets and select Biofeedback:

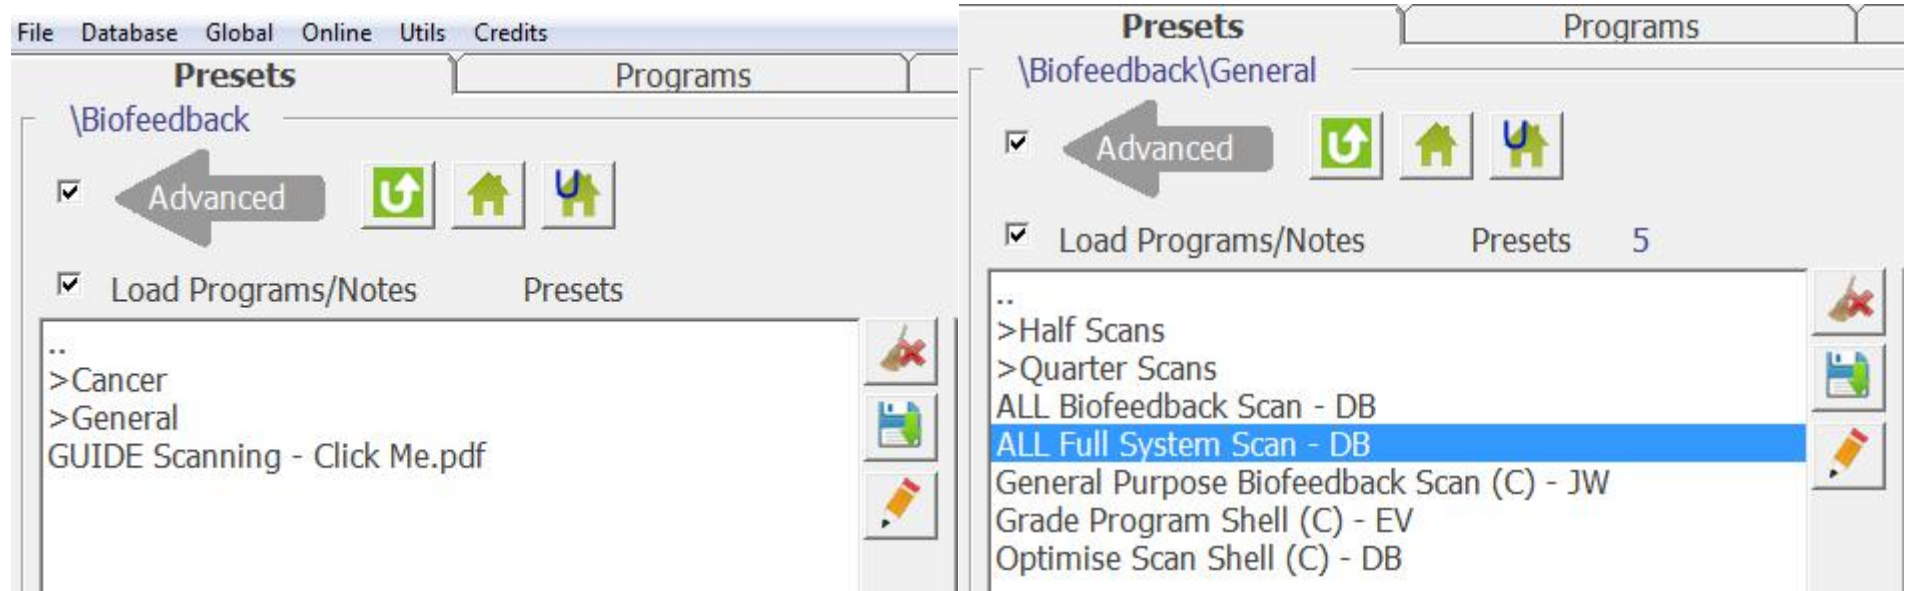

Now select >General to see the result shown on the right.

Select the highlighted preset.

Now go to Control, tick **Allow Generator Overwrites**, then click the scan generator. The Frequency Column should now be empty, and you should see these settings:

Biofeedback Scan

Start Frequency

76000

Hz

Finish Frequency

152000

Hz

Initial Step Size

20

Hz

Decimal Places

0

Max Hits to Find

20

Samples / Step

1

Start Delay

30

Samples

01:03:50

Scan

Detect

☒ Max

☐ Min

☒ BPM

☐ HRV

BPM -

HRV -

Calculate Using

☒ Running Average

☐ Peak

☒ 2 DP Max

☒ Single Scan

☐ Grade Program

Av. BPM -

Av. HRV -

Click Scan Button to start biofeedback scan.

When your scan completes, you will see the results presented in a new window. You must save these by clicking the **Save and Exit** button.



This will take you to the **Create Program** window. Name your scan results set appropriately, then save it.

Create Program

Give your program a descriptive name. This will assist you when you do a program search. The program will be saved in C:\Spooky2\Custom.csv

Program Name

Scan SP 20171126

Frequencies (and optional advanced commands) are entered using a comma to separate each program step.

xxx-yyy Sweeps the frequency from xxx Hz to yyy Hz.

=xxx x is the dwell (seconds) this frequency is to be applied. Example: 2127=180,2128=240,2127-2128=600

Wx x is the waveform for this frequency. W sets Out 1 and w sets Out 2. The values of x for when specifying the waveforms are:

1 for Sine.

2 for Square.

3 for Sawtooth.

4 for Inverted Sawtooth.

5 for Triangle.

6 for Damped Sinusoidal.

7 for Damped Square.

8 for H-Bomb Sinusoidal.

9 for H-Bomb Square

Gx x is 1 to turn gating on. 0 for no gating.

Ax x is the amplitude (voltage peak to peak) of the output.

Frequencies

88380,92400,110860,93800,88440,106140,110920,88540,88580,105220

Enter the default duration (in seconds) you wish to apply each frequency.

Dwell

180

Any notes for this program should be entered here. Spooky2 will include this in searches.

Program Description

Email a copy to Cancer Clinic NZ

Spooky2 will automatically refresh the database loaded into memory. Your new program can now be searched in the Programs tab.

Note that this all-pathogen scan doesn't just find organisms – it also kills them. So remember that every scan you do is also a powerful treatment in itself.

79

For this reason, we recommend that scans be done in Contact Mode using TENS pads. However, it's also possible to use

Remote Mode if necessary, but remember that a single remote sweep will not be as powerful a treatment as one done in Contact Mode.

You cannot use plasma to input a scan sweep because the plasma energy will freeze Spooky Pulse. However, you can use plasma to run your scan results, using the correct shell preset (Spooky Central Advanced - JW).

Notes:

1. If your scan is interrupted in some way, you will have to start it again. Scans cannot be paused once they've started. If All Full System scan takes too long for you, you can choose to run Quarter Scan instead.
2. If the sensor has been dislodged and fallen off, you need to repeat the scan from the beginning.

Colloidal Silver

Follow these simple steps to create true colloidal silver with a high silver content. The silver particle size will be very small. This increases effectiveness.

Step1: Preparation

Spooky2-XM Generator x1 (including power adapter, USB cable)

BNC/alligator cable x1

Spooky Boost x1

Spooky Silver Rod x2

Glass or Ceramic Container x1

Distilled Water Only

Magnetic Stirrer x1




Step2: Washing

Thoroughly clean the Spooky silver rods and container. Rinse with distilled water and dry with a napkin.


Step3: Connection

1. Fill a glass or ceramic container with distilled water. Do not use tap or filtered water. These will almost certainly contain unwanted impurities and chemicals.
2. Place two clean and shiny silver rods in the water. They must be more than one inch apart.
3. Making Connection. Connect Spooky boost to the generator, then connect the BNC/alligator cable to the Colloidal Silver port of Spooky boost. Use alligators to clamp the silver rods.

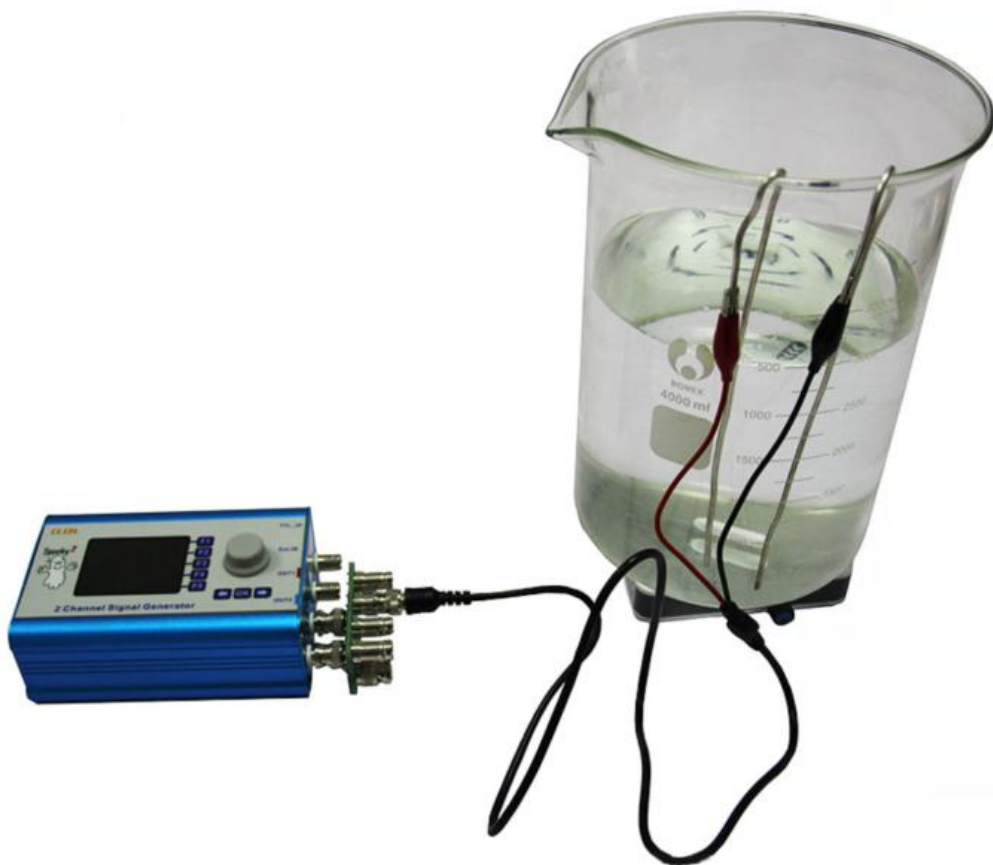


Step4: Settings

Turn on Spooky2 XM generator. Launch Spooky2 and use the calculator to estimate the Dwell you need to enter for the Colloidal Silver Generation program. Click Utils, Colloidal/Ionic Silver Calculator.

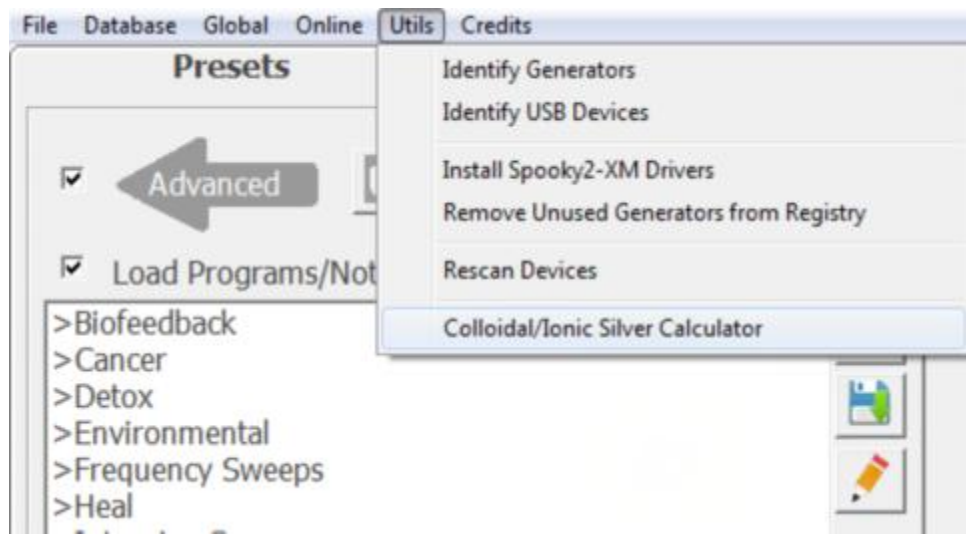

Colloidal / Ionic Silver Calculator

Spooky² Colloidal/Ionic Silver Calculator



Colloidal/Ionic Silver is easy to make. Making truly great nano-particle silver takes more effort. Spooky can help. Enter values in the boxes to find the optimum setting.

By Calculation

Volume (ml)	<input type="text" value="500"/>
PPM	<input type="text" value="20"/>
Current (mA)	<input type="text" value=".2"/>
Duration (mins)	<input type="text" value="750"/>
Duration (hours)	<input type="text" value="12.5"/>
Duration (days)	<input type="text" value=".5"/>


By Measurement

Initial TDS	<input type="text" value="0"/>
Final TDS	<input type="text" value="10"/>
PPM	<input type="text" value="20"/>

Enter your numbers in the top two to find the Dwell Multiplier you need to enter in the Program Options pane. The total time needed to make your CS will be shown beside Duration (mins), which needs to be remembered. For example, I enter 500ml and 20PPM. The duration is 750 mins.

If you don't have a multimeter to measure the current, simply make the supposition that your system will consume 0.2 mA.

Go to Preset tab, load the Colloidal Silver Generation - JW Preset. Enter the estimated dwell into the Dwell Multiplier field and go to Control tab to start the preset.

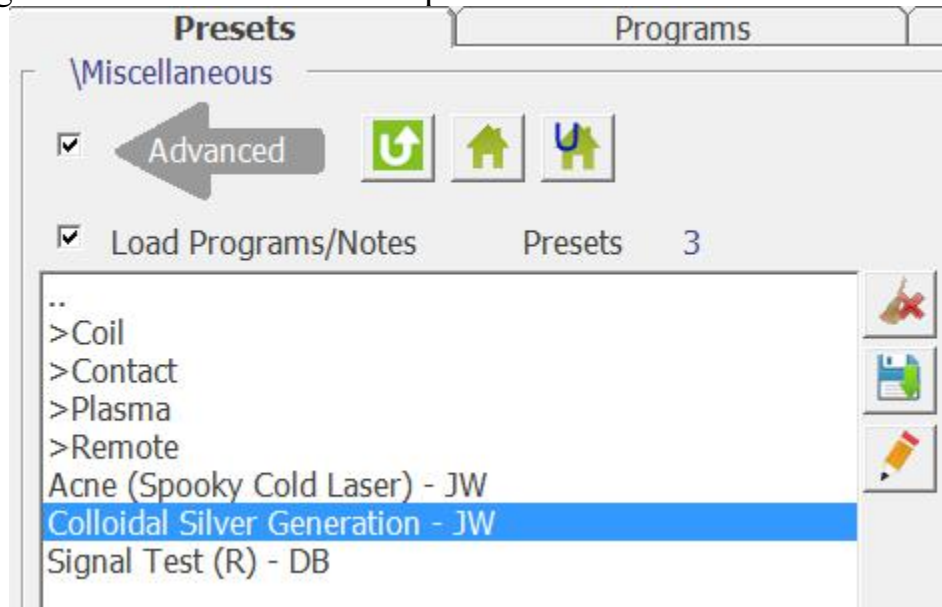

Presets

Programs

Settings

Control

System

Internet

Errors

Search

2,4,5T

3 mins

MW

M255.483

2,4D

3 mins

MW

M221.037

40KHz General

15 mins

XTRA

40000

Abdominal Cramps

12 mins

XTRA

72,95,190,304

Abdominal Inflammation

52 mins

CAFL

2720,2489,2170,1865,1800,1600,1550,880,832,802,787,776,727,660,465,450,

Abdominal Pain

30 mins

CAFL

10000,3000,95,3,3040,522,440,160,124,26

Abscess Nocardia Asteroides

30 mins

XTRA

228,231,237,694,710,887,2890,11092.19,11096.87,17679.38

Abscesses 2

33 mins

XTRA

2720,2170,1865,1550,880,802,787,727,500,444,190

Abscesses 3

51 mins

XTRA

2720,2170,1865,1550,880,802,787,760,727,690,660,500,465,450,444,428,190

Abscesses Secondary

32 mins

CAFL

1550,802,760,660,465,450,444,428

Abscesses

32 mins

CAFL

2720,2170,880,787,727,500,200,190

Absentmindedness

15 mins

CAFL

5.8

Accelerate Injury Healing

3 mins

XTRA

47

Accelerate Learning

3 mins

XTRA

6.3

Accelerate Scar Healing

3 mins

XTRA

5.9

Acephate

3 mins

MW

M183.16

Database

☒ DNA

☒ BP

☒ MW

☒ PROV

☒ BIO/VEGA

☒ CAFL

☒ XTRA

☒ CUST

☒ HC/KHZ

☒ RIFE

☒ ALT

0 / 21323

Loaded Programs

Colloidal Silver Generation (CUST)

↑

↑

↓

↓

Program Description

Options

Repeat Each Frequency

1

☐ Remove Duplicate Frequencies

Repeat Each Program

1

☐ Apply Tissue Factor to MW and BP Programs

Repeat Sequence

1

Repeat Chain

1

Dwell Multiplier

750

Frequency Multiplier

1

Do NOT sort frequencies

Estimated Total Run Time 01:00:00¹

Spooky²

The waveform has been designed to produce very small silver particles of varying size. Do not rush the manufacturing process. Slower is better.



Tips
Treatment Choices

Before you use Spooky2 to tackle any problem, you have a number of very important things to consider first:

Which mode – plasma, contact, or remote?

Plasma: well-designed and implemented plasma is quickest and most powerful. The very best available today comes from the Spooky Team – Spooky Central.

Contact: this comes next for speed and power.

Remote: scalar DNA treatment. The convenience of Remote Mode makes it a winner.

There are considerable benefits to be had from mixing your modes, and our recommendation is to do one Plasma or Contact session on the main problem every day, then switch the generator over to Remote Mode. That way, you get the best of both worlds.

Legal Notice & Disclaimer

The Spooky and/or Spooky2 software and frequency generation systems are not approved by the FDA as medical devices. They are intended for use as experimental electronic devices only. They are not intended for the diagnosis, prevention, cure, treatment, or mitigation of any disease or illness in human beings. Neither are they designed or intended to affect the function or structure of any human body system.

We make no medical claims whatsoever for the Spooky and/or Spooky2 frequency generation systems. If you have a problem with your health, please consult a licensed healthcare professional.

In the US, you can legally use frequency systems like Spooky and/or Spooky2 for testing, energy balancing, life extension, and relaxation. You can experiment using frequencies on bacterial cultures, laboratory animals, and yourself. You still have a legal right to self-medicate under the Ninth Amendment of the United States Constitution.

In Germany and South Africa, as well as some other nations, frequency devices are legally licensed as medical instruments.

Please note that we are not responsible whatsoever for the use, abuse, or misuse, intentionally or unintentionally, of the Spooky and/or Spooky2 frequency generation systems or any of their component parts due to any circumstances beyond our reasonable

control. In any case, I, John White, or any of my associates, shall have no other liability.

By using the Spooky and/or Spooky2 frequency generation systems, you, the user, understand and accept that you have no expectation of curing any ailment.

You also understand that possible negative physical and/or mental effects, unknown to us, might result from the use of the Spooky and/or Spooky2 frequency generation systems. Moreover, you intend to undertake only responsible experimentation, and you voluntarily accept all responsibility for the use and application of all frequencies generated by the Spooky and/or Spooky2 systems.

Furthermore, you agree that you will not hold us responsible for any consequences, whether harmful or otherwise, that may occur as a result of using the Spooky and/or Spooky2 frequency generation systems.

Spooky2 Software License

Although the source code is © John White, this software is free, and has been written for the greater benefit and knowledge of all mankind. You are actively encouraged to pass it on freely to everyone you know, as long as it's accompanied by this document.